



WWW.VEEDUBTRANSPORTERS.CO.UK

AUTO HEADLIGHT SWITCH FITTING & PROGRAMMING INSTRUCTIONS



Required Tools

- None

Time Needed



~5 Minutes

Difficulty



Easy

Hard

How To Fit Step 1

To remove your original Headlight Switch, set it to the off position, push the switch inwards and turn the switch to the right.

This will release a set of clips allowing you to pull out the switch.



Step 2

Unplug the connector on the back of the switch.



Step 3

Take the new headlight unit and clip the connector straight into the back.



Step 4

Push in the switch on the new unit, and turn it towards the auto position to move the clips inwards. Then slide it into position in your van.



Please turn over for programming instructions.

Programming Light Sensitivity Level


By default, your auto headlight switch will be set to the standard level of sensitivity. You may want to change this in order to make them turn on in lower or higher levels of light.

High Sensitivity Mode - (Will turn the lights on earlier)

Get in your van, shut the doors and **do not** put the key in the ignition. Make sure the switch is set to the 'Off' position.

Then turn the switch to 'Auto' and wait for 5 seconds or more. Next, turn the switch back and forth between 'Auto' and 'Off' 6 times within 4 seconds.
(OFF > AUTO > OFF > AUTO > OFF > AUTO).

If you have followed the configuration steps correctly the 'Side Light' icon should flash three times and your device will be set to a high sensitivity level.

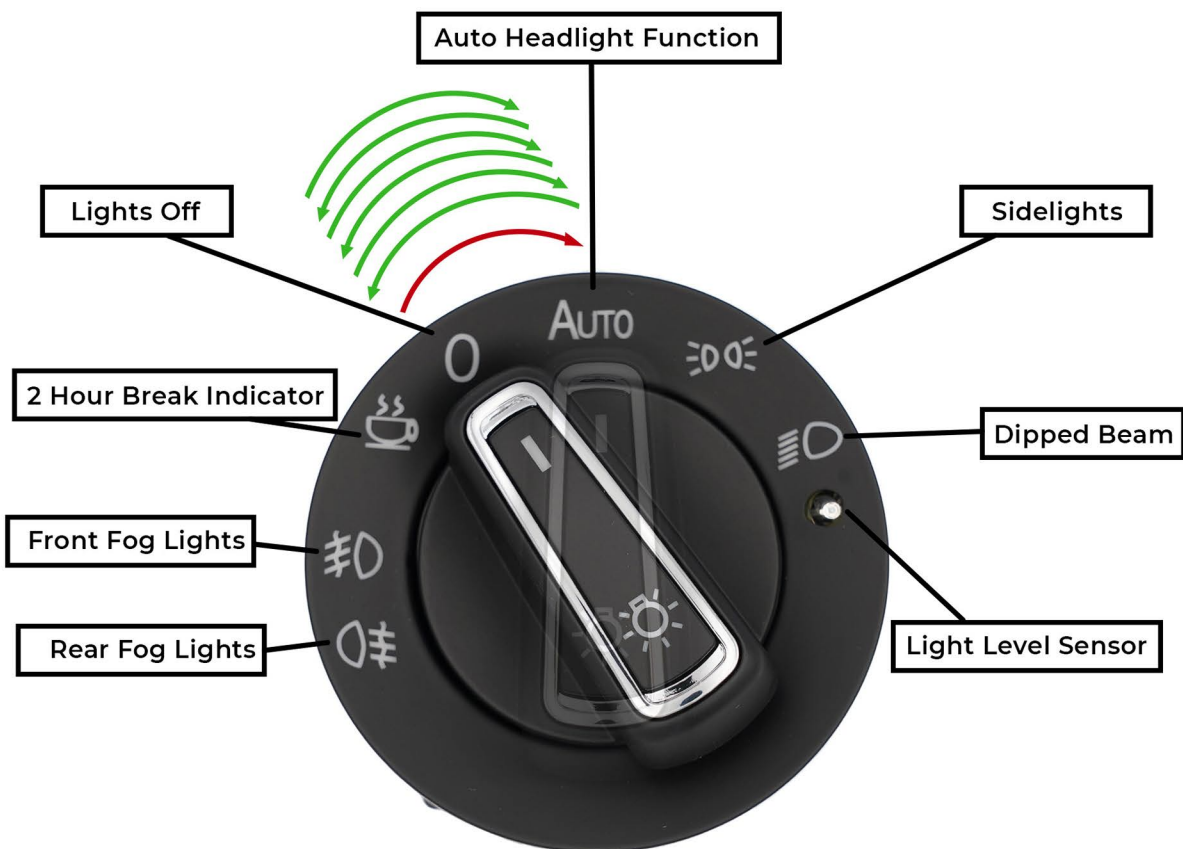

Programming Light Sensitivity Level


By default, your auto headlight switch will be set to the standard level of sensitivity. You may want to change this in order to make them turn on in lower or higher levels of light.

Low Sensitivity Mode - (Will turn the lights on later)

Get in your van, shut the doors and do not put the key in the ignition. Make sure the switch is set to the 'Off' position.

Then turn the switch to 'Auto' and wait for 5 seconds or more. Next, turn the switch back and forth between 'Auto' and 'Side Light' 6 times within 4 seconds. (SIDE LIGHT > AUTO > SIDE LIGHT > AUTO > SIDE LIGHT > AUTO).

If you have followed the configuration steps correctly the 'Side Light' icon should flash once and your device will be set to a low sensitivity level.

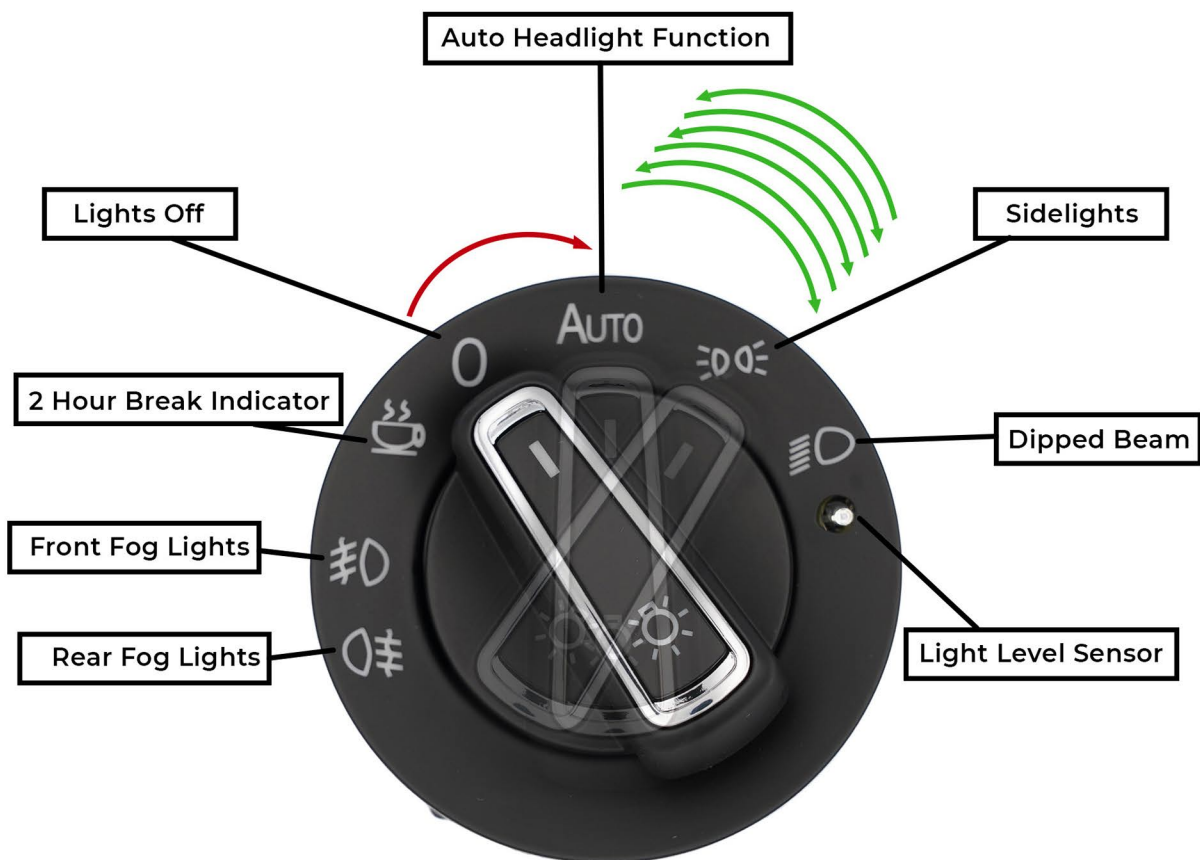

Programming

Homecoming Light Function

Toggle The Homecoming Light Function On/Off


By default, your homecoming lights will be set to on. This means that once you remove your keys from the ignition, it's dark outside and the switch is set to 'Auto' your sidelights will remain on for a short amount of time.

To toggle the function on or off, follow the process below.

Get in your van, shut the doors and do not put the key in the ignition. Make sure the switch is set to the 'Off' position.

Then turn the switch to 'Side Light' and wait for 5 seconds or more. Next, turn the switch back and forth between 'Side Light' and 'Dipped Beam' 6 times within 4 seconds. (DIPPED BEAM > SIDE LIGHT > DIPPED BEAM > SIDE LIGHT > DIPPED BEAM > SIDE LIGHT).

After you've completed the moves you'll be able to tell whether the homecoming feature is turned on or off by the number of times the 'Side Light' icon flashes. The function is on if the icon flashes once and off if it flashes three times.

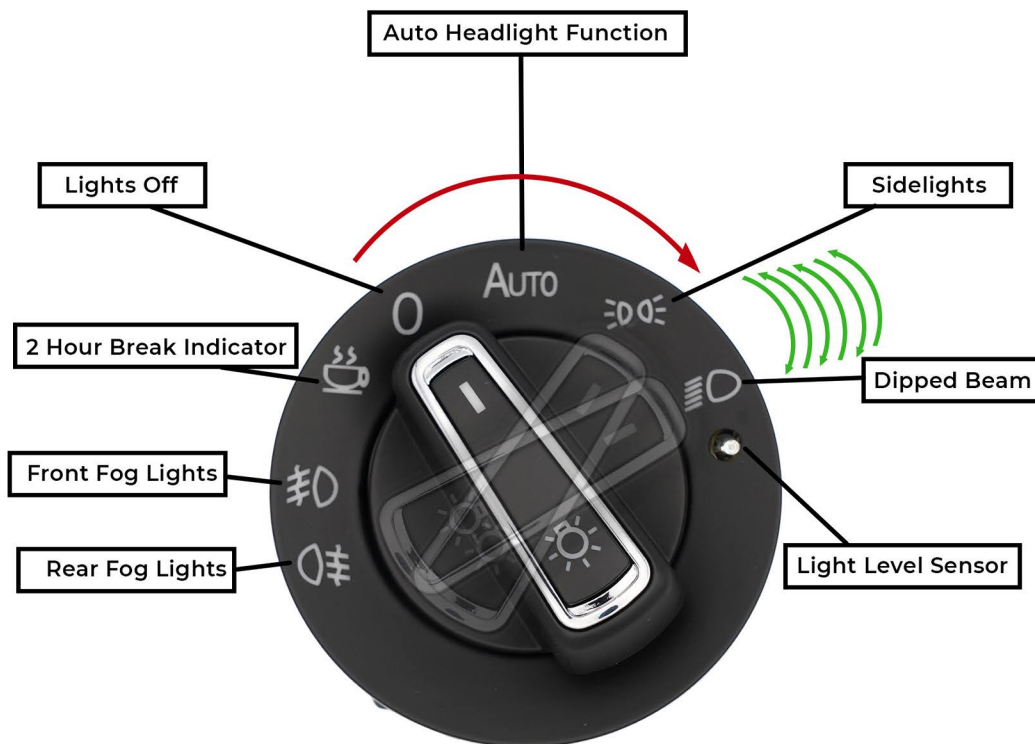

Programming

Homecoming Light Function

Change How Long The Homecoming Lights Are On For



By default, your homecoming lights are set to stay on for 15 seconds once the key is removed from the ignition. If you'd like to lengthen the duration they turn on for to 30 seconds, you can follow the steps below.

Get in your van, shut the doors and do not put the key in the ignition. Make sure the switch is set to the 'Off' position.

Then turn the switch to 'Auto' and wait for 5 seconds or more. Next, pull out the switch to the 'Front Fog Lights' and push it back into 'Auto' 6 times within 4 seconds.

(FRONT FOG LIGHT > AUTO > FRONT FOG LIGHT > AUTO > FRONT FOG LIGHT > AUTO).

After you've completed the moves you'll be able to tell whether the homecoming feature is set to 15 seconds or 30 seconds by the number of times the 'Side Light' icon flashes. The function is set to 15 seconds if the icon flashes once and 30 seconds if it flashes three times.

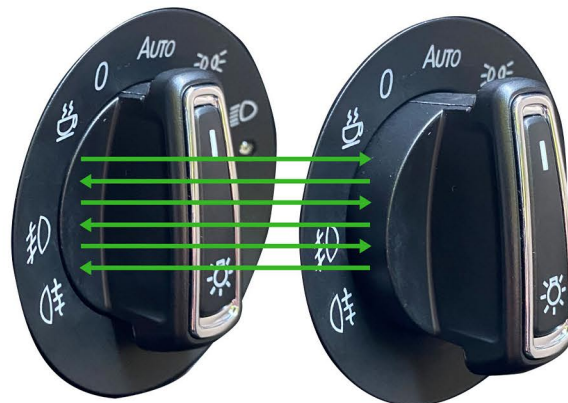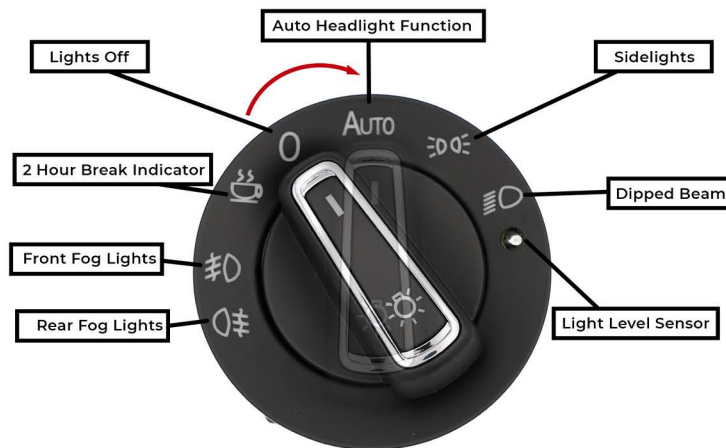



WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 **veedubtransporters**

 **Vee Dub Transporters**

For any further assistance please call our Customer Services Team



0116 409 1911

