



WWW.VEEDUBTRANSPORTERS.CO.UK

T5/T6 FRONT & REAR MUDFLAP FITTING INSTRUCTIONS



Required Tools


- Electric Drill & 2.5mm Pilot Bit
- Medium Phillips Head Screwdriver
- Microfibre Cloth
- T20 Bit Ratchet or Screwdriver
- Drill & 2.5mm Pilot Bit
- Bucket Of Warm Water

Time Needed



~20 Minutes

Difficulty

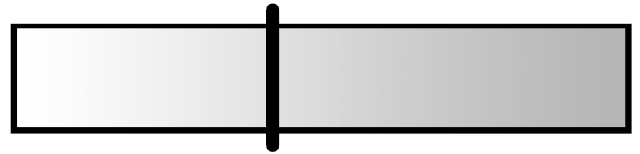

Easy

Hard

Step 1

Turn the wheel away from the side you're working on to give yourself more room.



Step 2

Clean the area you'll be working on to prevent any unwanted dirt getting in the way.



Step 3

Make a hole in the top bracket of the Mudflap.
Prepare a screw in the outer bracket.



Step 4

Prepare a screw in the outer bracket.



Step 5

Remove the T20 Screw located inside of your
wheel arch.




Step 6

Remove the rubber bung that's in the hole on the undercarriage.



Step 7

Put the supplied plastic grommet in it's place.

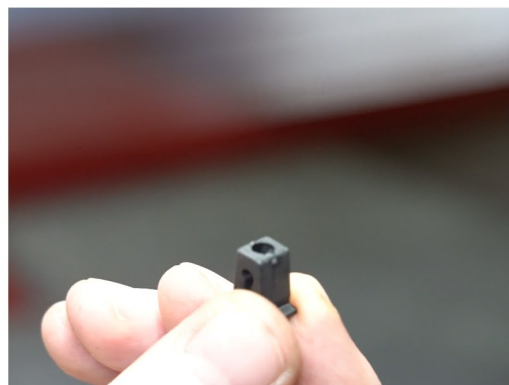

Step 8

Offer the Mudflap up to the frame of your vehicle.



Step 9

Secure the lower screw first and then the wheel arch screw.



Step 10

Then secure the wheel arch screw.



Step 11

Put your Rear Mudflaps in warm water for 10 minutes to make them more malleable and easy to install.




Step 12

Offer your Mudflap up to the bodywork ensuring a close fit. Get a second pair of hands to hold it in place.



Step 13

Drill pilot holes and fit the provided screws into the locations shown.

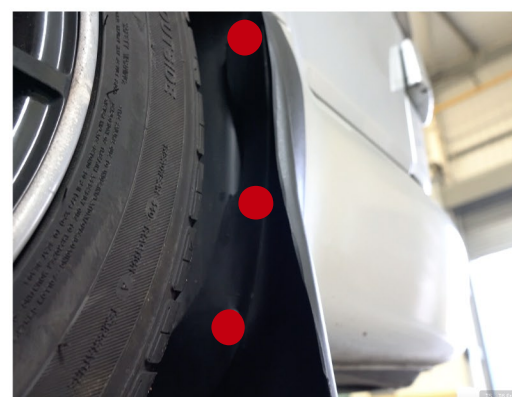

Repeat the appropriate steps on the opposite side of your van for the remaining two Mudflaps.



WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 **veedubtransporters**

 **Vee Dub Transporters**

For any further assistance please call our Customer Services Team



0116 409 1911

