



WWW.VEEDUBTRANSPORTERS.CO.UK

CURTAIN KIT FITTING INSTRUCTIONS



Required Tools


- Drill with 2.5mm bit
- Medium Philips Screwdriver
- Rubber Mallet

Time Needed



~ 45 Minutes

Difficulty

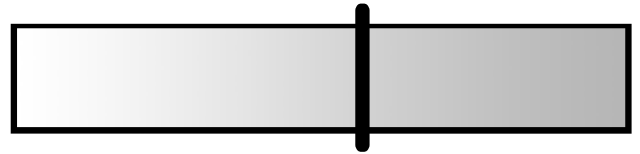

Easy

Hard

Step 1

Unpack the curtains, rails and fittings, making sure you have all the required parts.



Example fittings for behind passenger curtain.




Step 2

Before fitting the rails, slot in one end cap on the left hand side of the rail.



Step 3

Align the first rail with the curved edge facing inwards. Rails vary in length, use the aperture of the window to judge rail location.

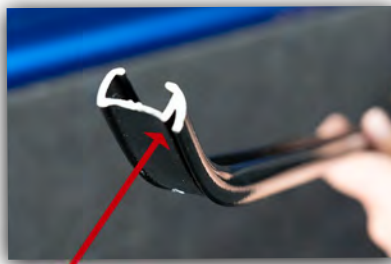

Curved Edge




Step 4

Then use the middle hole in the rail as a guide to drill a hole into the windowsill with your 2.5mm bit.



Step 5

Next use a Philips head screwdriver to secure the middle screw, holding the rail in place.

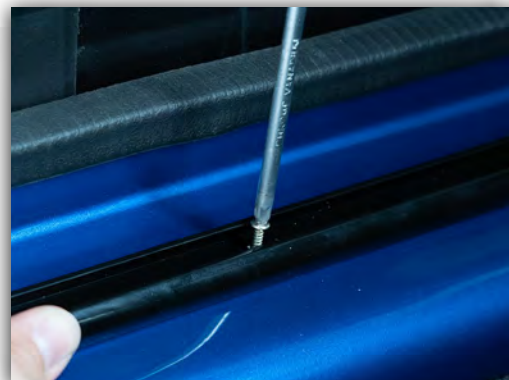

Step 6

You may notice that the ends of the rails need to be bent slightly into place. If necessary, lightly tap into position with a rubber mallet, being extremely careful not to kink the rails.



Step 7

Then using the two pre-drilled holes at each end of the rail, drill into your van's frame and secure the remaining screws.



Step 8

Now fit the top rail, repeating the same process from steps 3-7.



Step 9

Once both rails are installed correctly, it's time to thread on the curtains. Stretch the curtain across the length of the window to observe the correct side for the poppers. The left hand curtain will need to be fitted first and therefore the poppers will need to be on the left hand side.



Step 10

Start on the end of the rail without the end cap. Thread the curtain's plastic rail guides into the bottom rail channel, one by one.



Step 11

Once the bottom is complete, thread the top rail guides into the top rail. Then slide the curtain to the left hand side.



Step 12

Repeat the process for the second curtain, ensuring that the poppers sit on the right hand side of the curtain.



Step 13

Install the two end caps to the other side of each rail once the curtains are correctly installed. If you're struggling to get the end caps in place, you may need to loosen the screws that secure the rail to allow more room. Make sure you re-tighten the screws once the end caps are fitted.



Step 14


For each of the four end caps, use the hole as a guide and drill through the rail and frame of your vehicle. Then screw the end caps into place.



Step 15


Now both curtains are fitted, it's time to install the poppers on each side. Match the button for each popper to the desired location on the wall of your van, ensuring the curtain isn't stretched too far.

If you're fitting a curtain to a sliding door, you may have to secure a popper to the plastic door handle. In this case, don't drill a hole through the plastic, just use one of the self tapping screws.

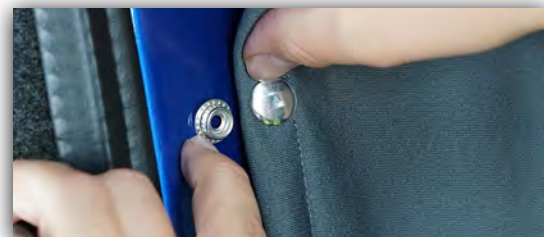

Step 16

Drill a hole in the correct locations then screw in each popper. Repeat the process on the other side and attach all of the poppers.

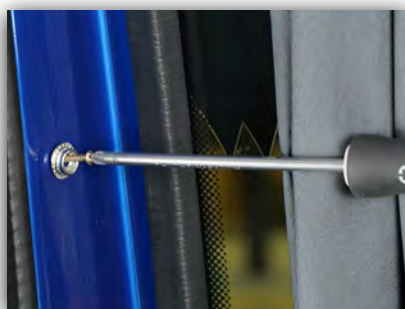

Step 17

Your curtains are now installed, stand back and admire!





WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 **veedubtransporters**

 **Vee Dub Transporters**

For any further assistance please visit this page:

<https://www.veedubtransporters.co.uk/contact-us/>

