




WWW.VEEDUBTRANSPORTERS.CO.UK

(T5/T6 SIDE DOOR SEALS) FITTING INSTRUCTIONS

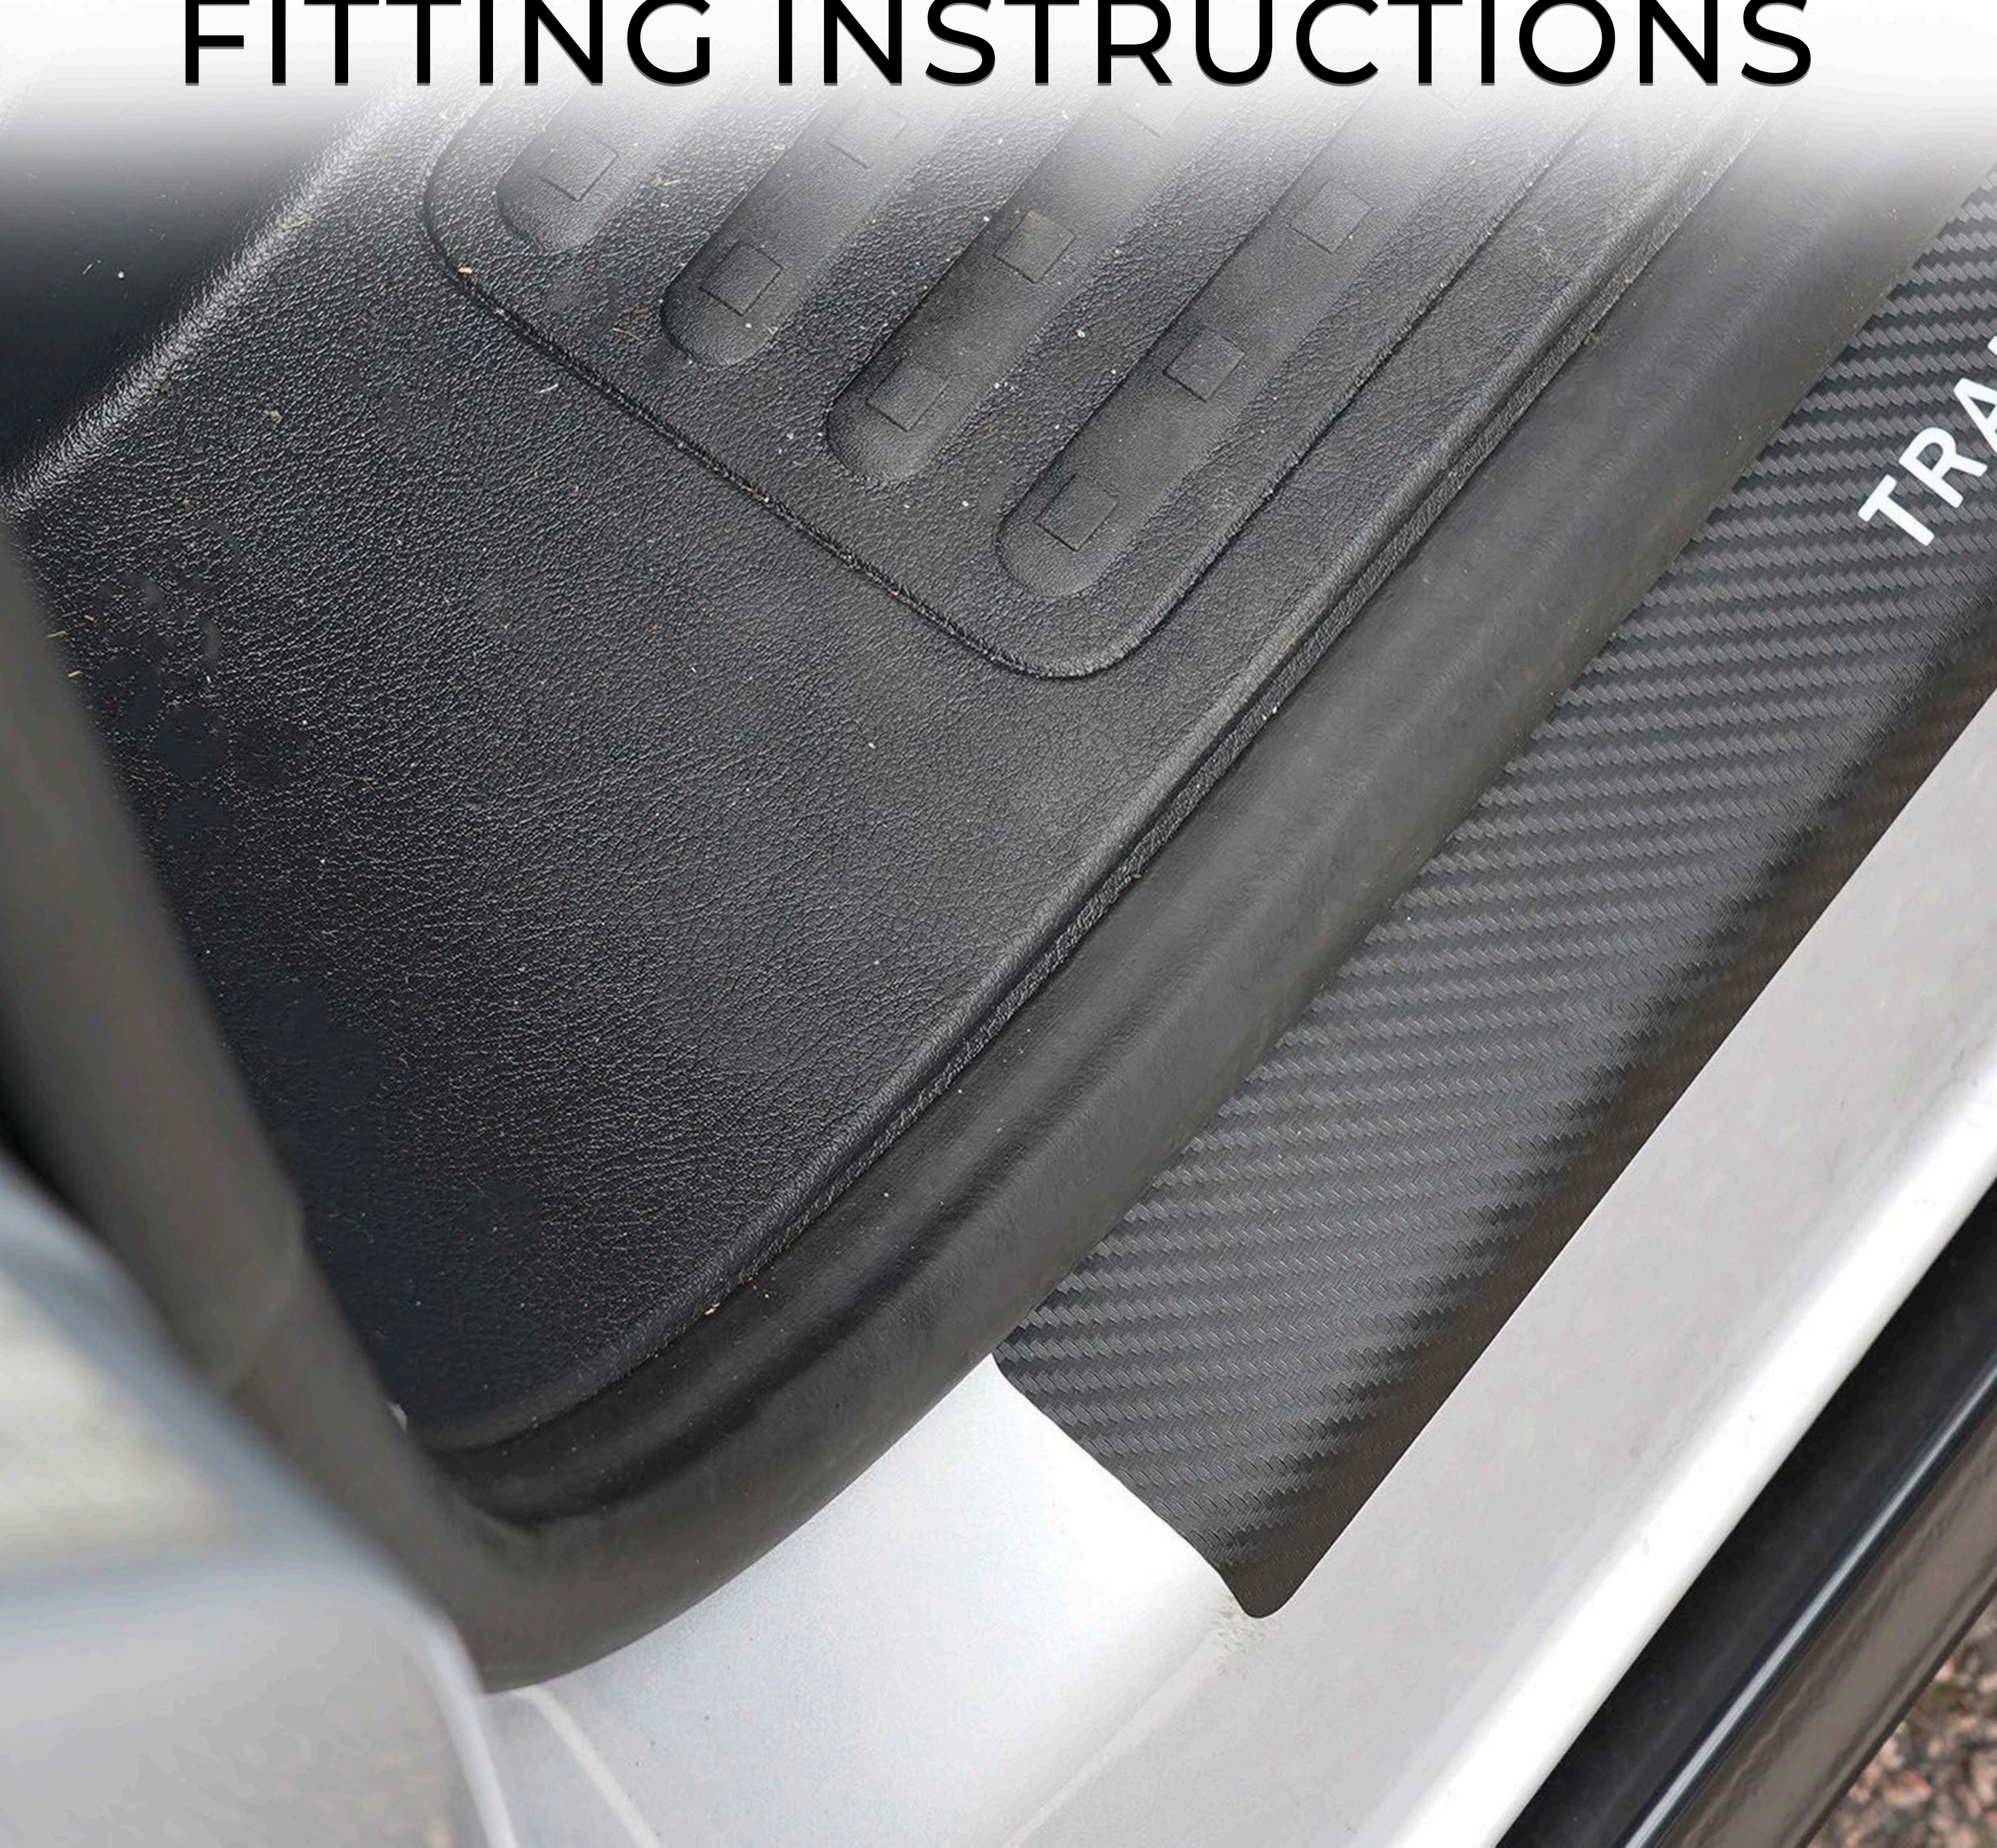

Required Tools


- Trim Removal Tool
- Rubber Mallet
- Snips

Time Needed



~1 Hour

Difficulty


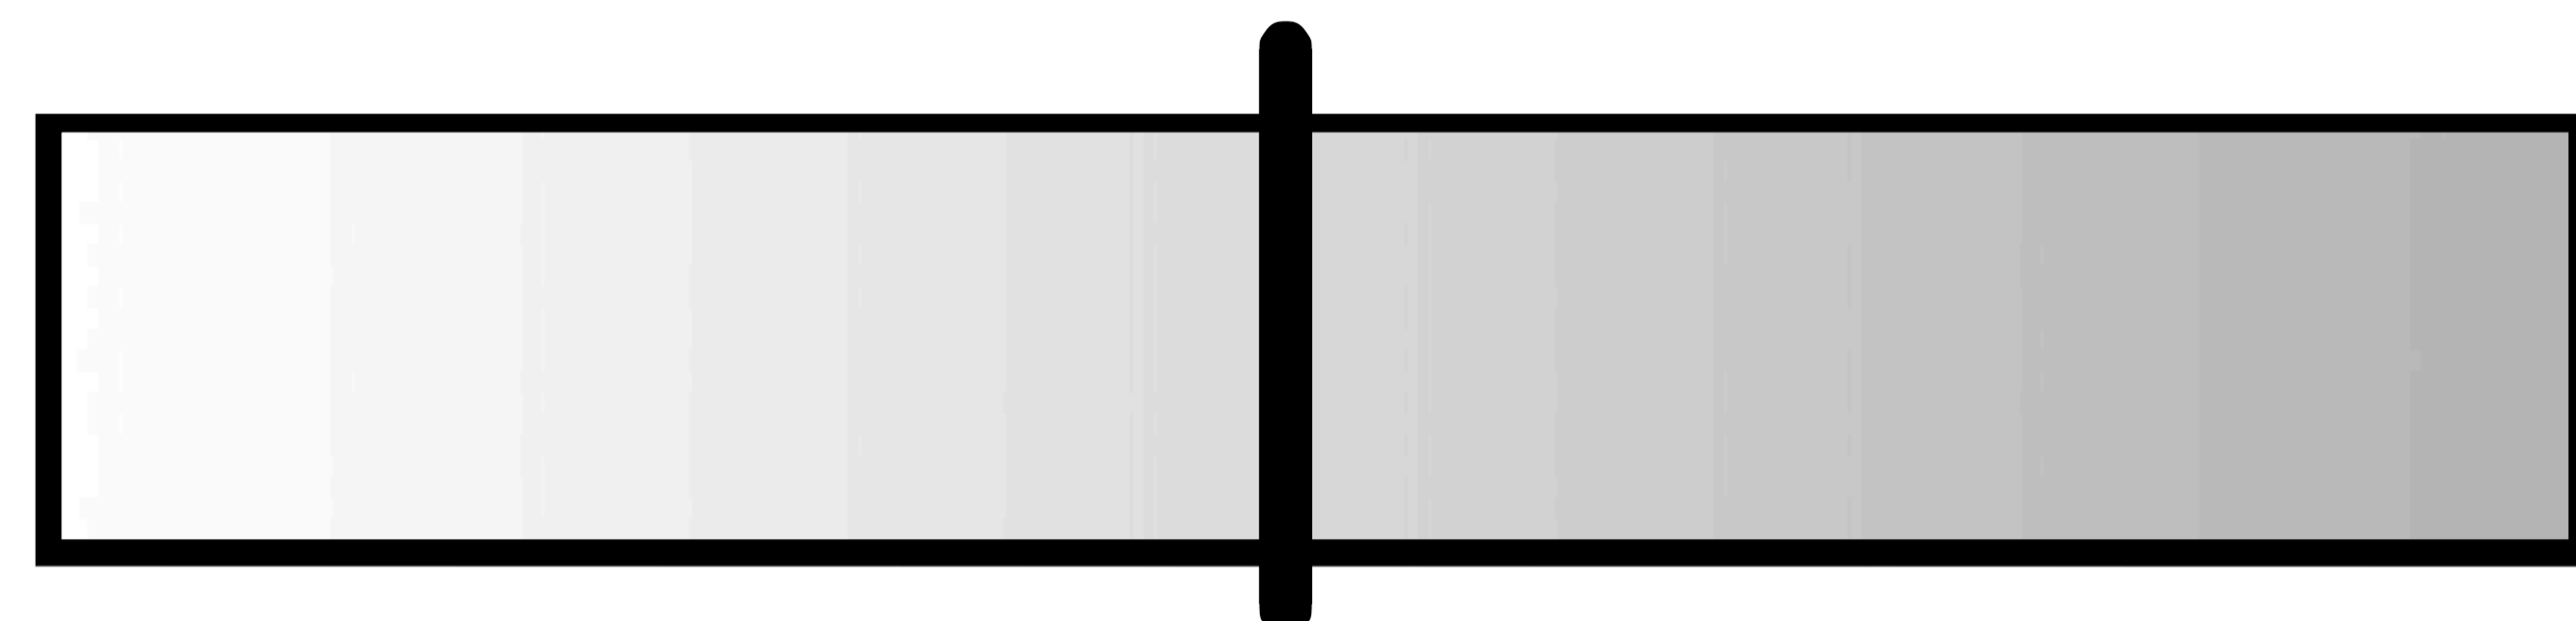


Easy

Hard

Step 1

Use a trim removal tool to remove the side door step insert. Carefully pry around the edges to push the step upwards ensuring a smooth release.

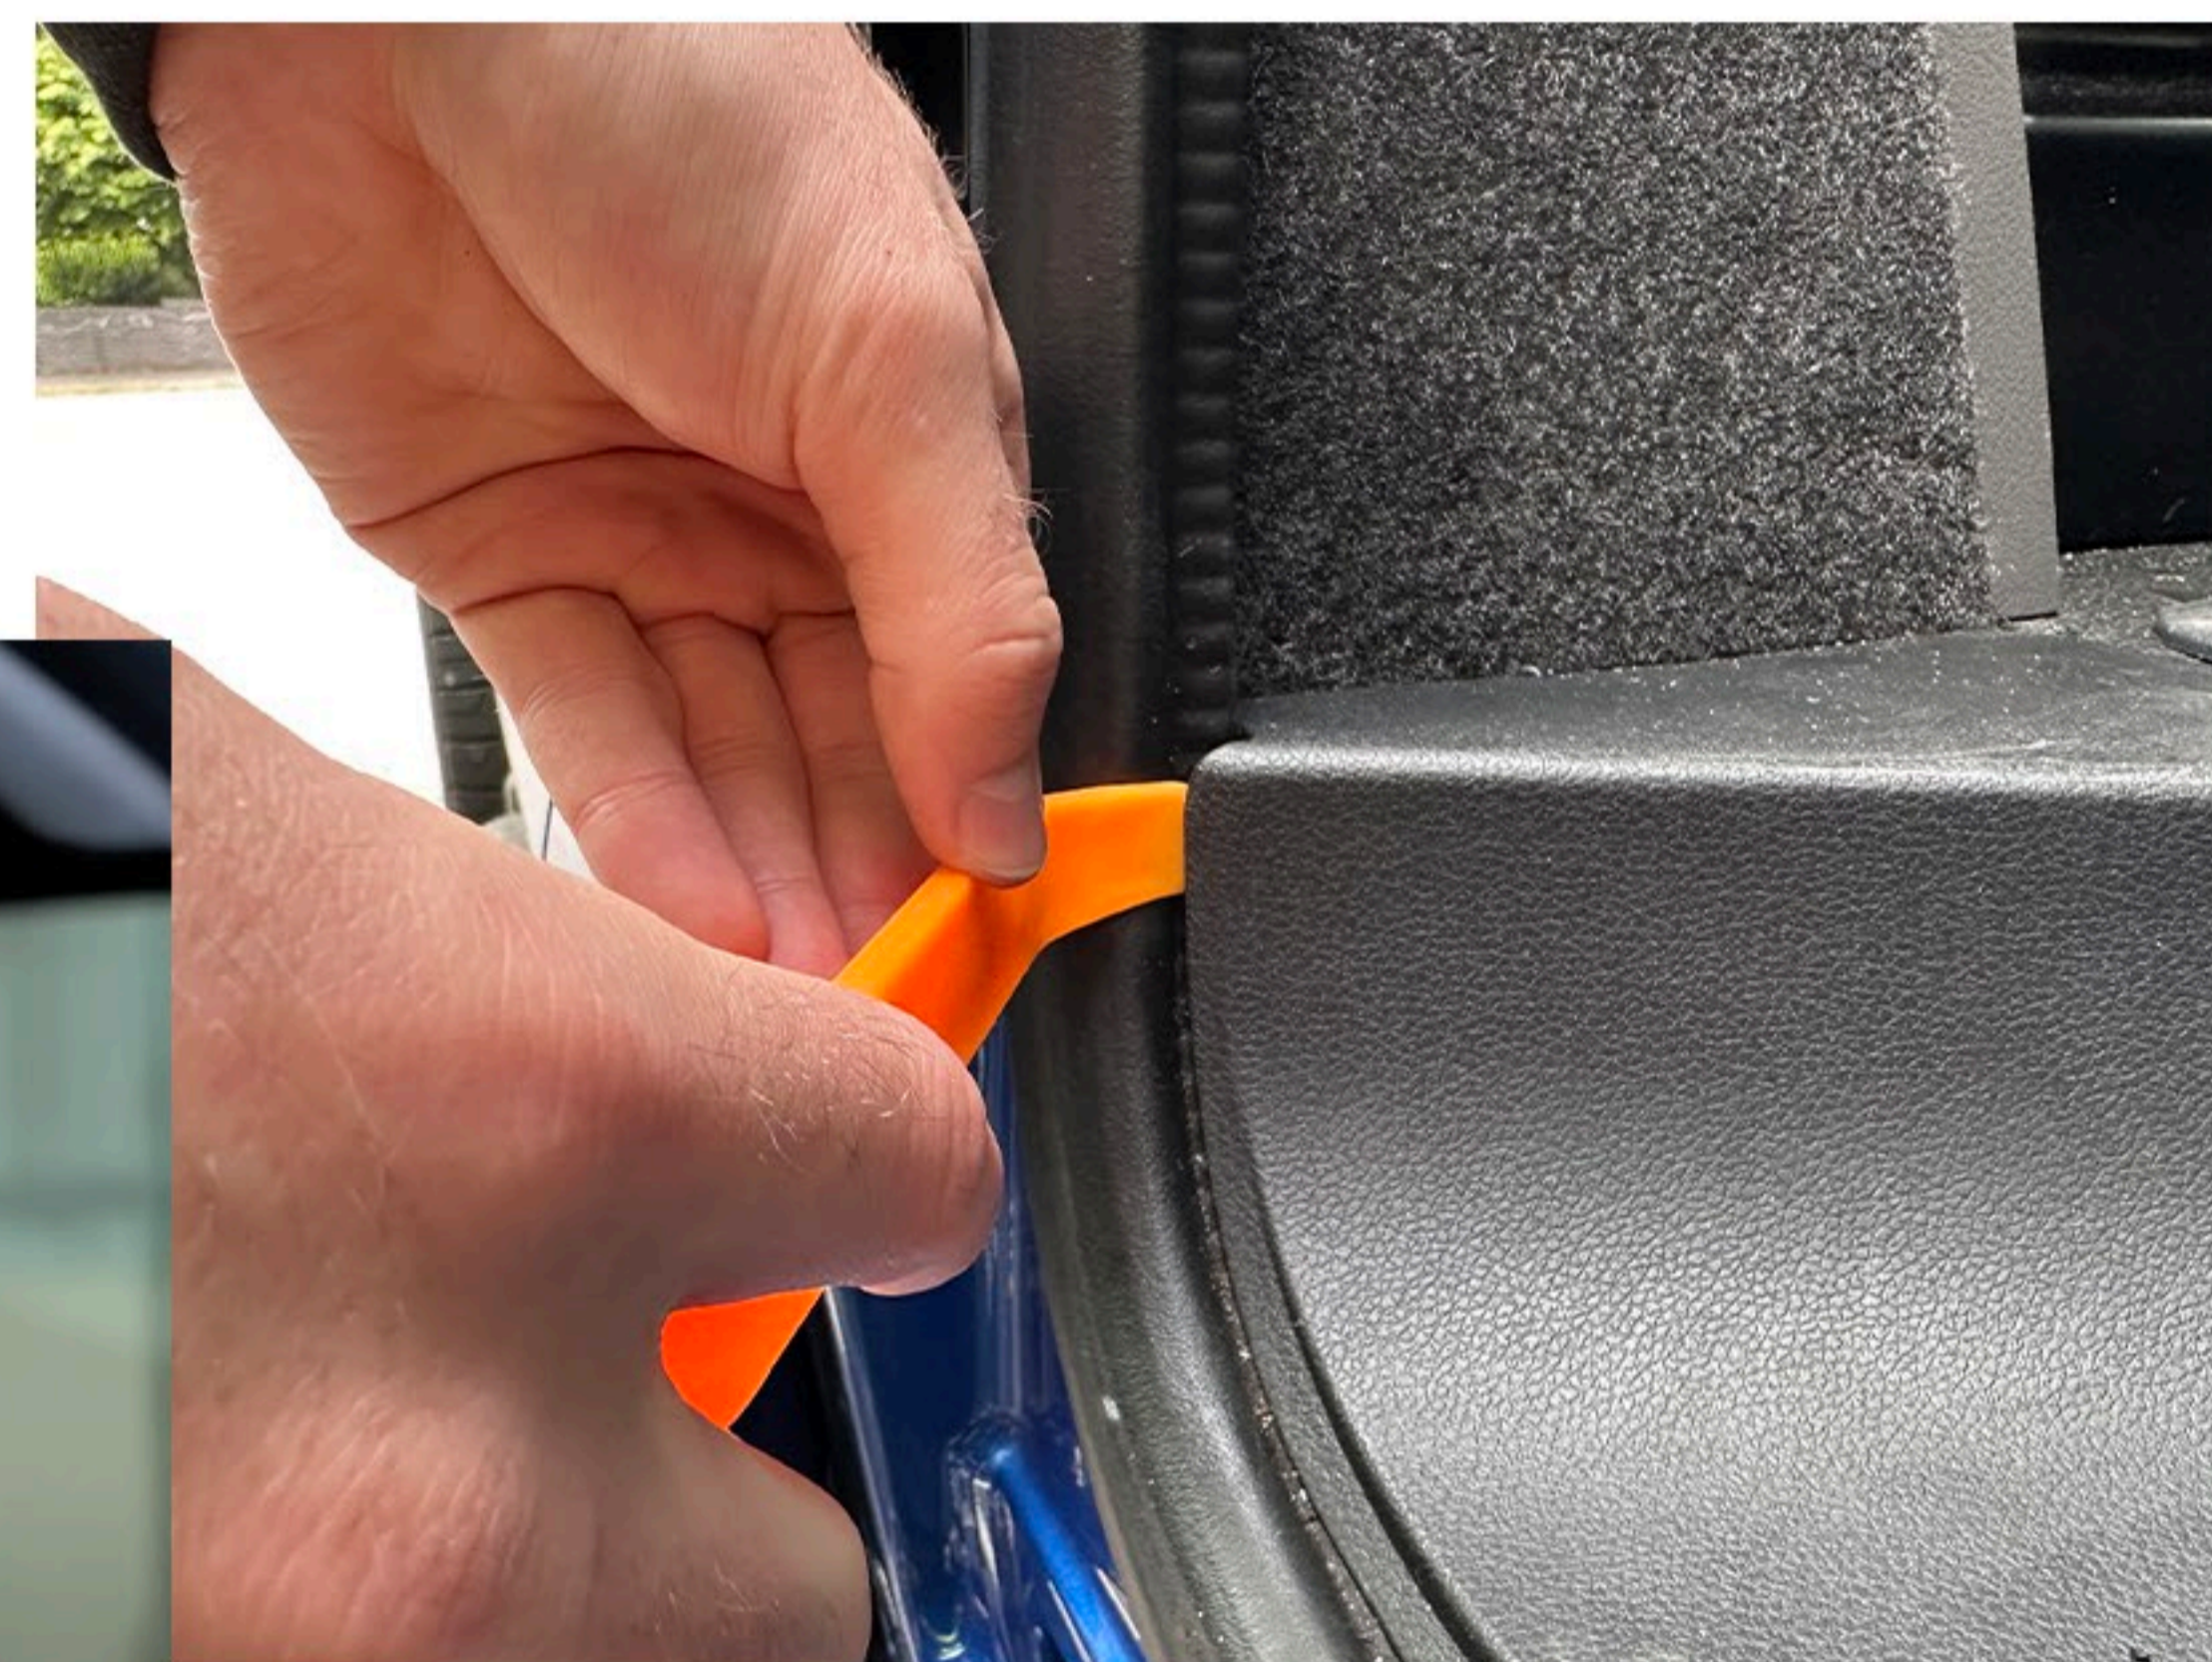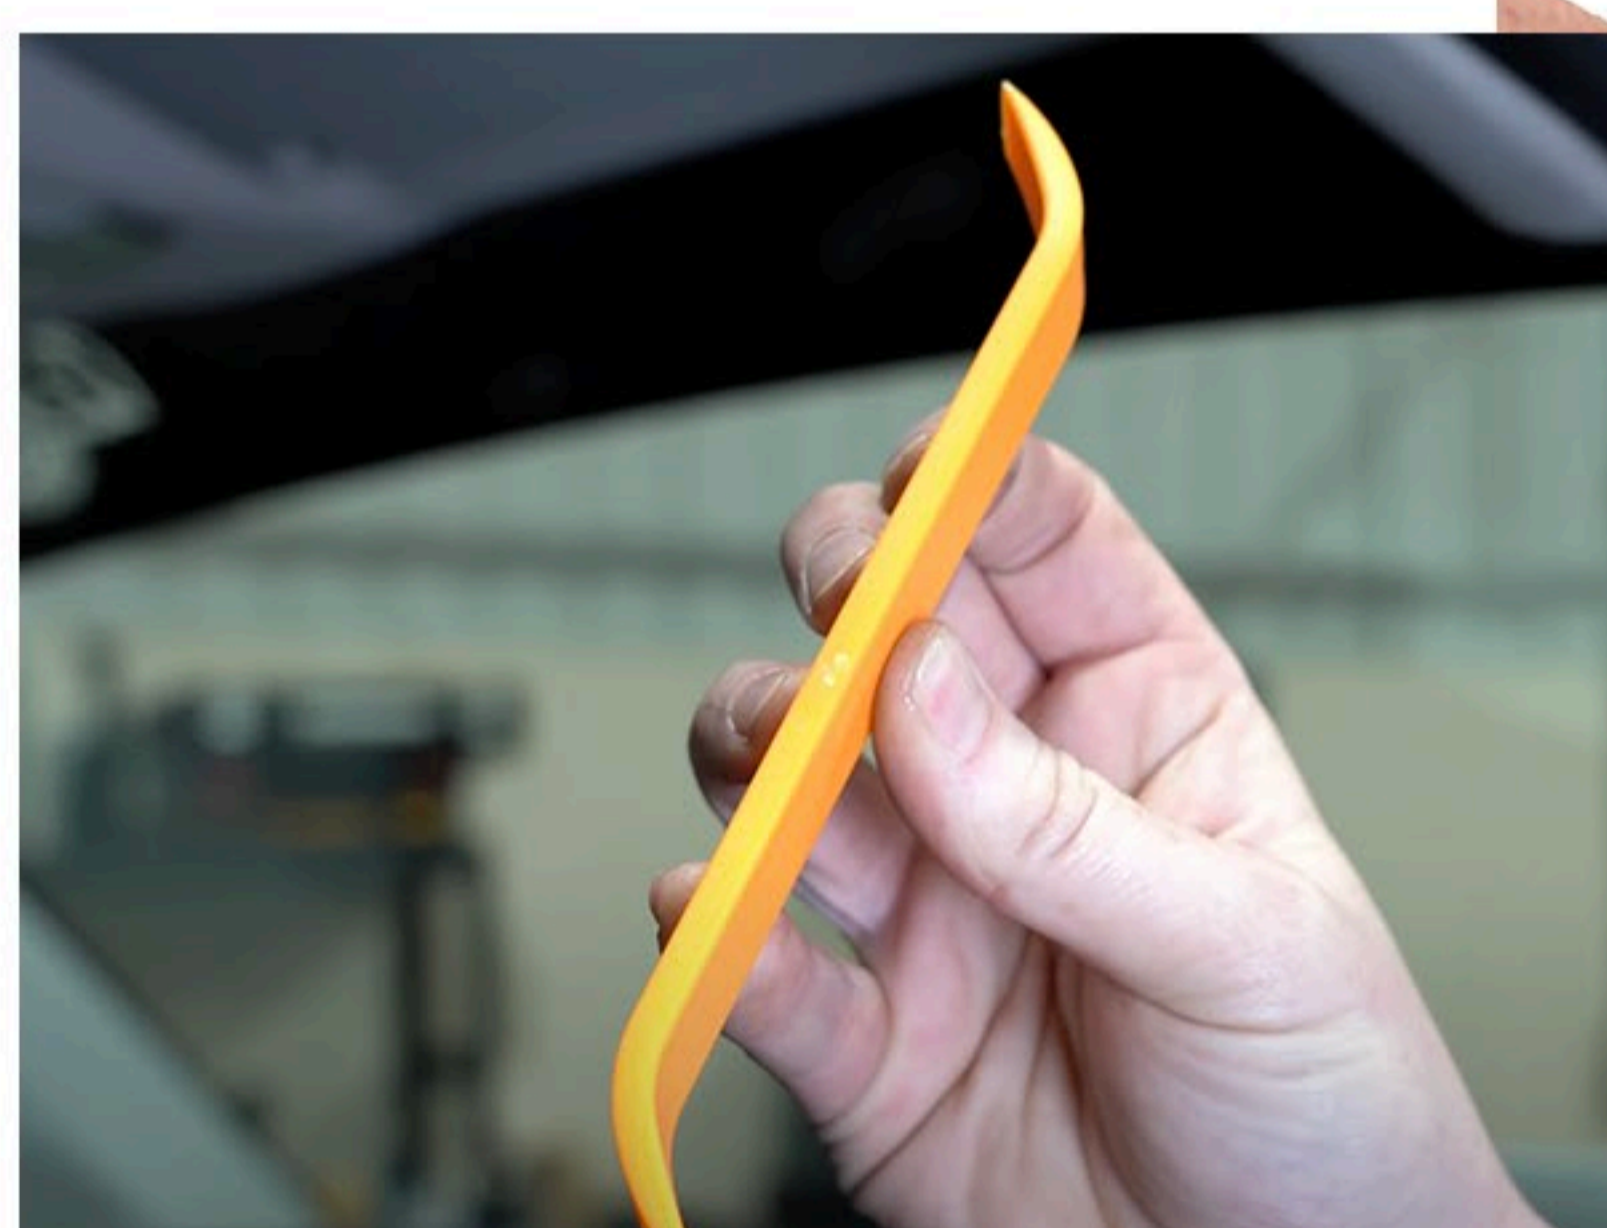

Step 2

Take note of the seal orientation and where it starts, then slowly pull it away from the metal.



Step 3

Starting in the same place as the genuine seal work slowly and in sections, pushing the new seal into place then use your rubber mallet to ensure it's sitting in the correct position.



Step 4

Once you've made it all the way around you may have some excess seal, use your snips to cut it to length.



Step 5

Push the side door step insert back into place. Make sure the clips are aligned with the holes and they'll slot into position.





WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 **veedubtransporters**

 **Vee Dub Transporters**

For any further assistance please call our Customer Services Team



0116 409 1911

