



WWW.VEEDUBTRANSPORTERS.CO.UK

DUB STYLE FRONT & REAR MUDFLAP FITTING INSTRUCTIONS



Required Tools


- Ratchet
- Phillips Head Bit
- T25 Torx Bit
- Pliers

Time Needed



~ 30 Minutes

Difficulty

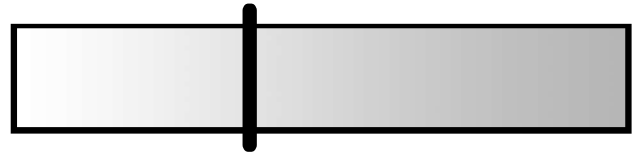

Easy

Hard

FRONT MUDFLAPS

Step 1

Identify the correct side of mudflap.

In this guide we will be fitting the offside mudflap, the process is the same on both sides.



Step 2

On the rear side of your front wheel arch you'll need to remove two screws from the plastic. Turn your wheel away from the side you're working on to make space. Use a ratchet to remove the screws (they'll either be phillips head or T25 torx).



Step 3

Once the screws are removed, offer up the mudflap to your van's bodywork. It should slot into place and the highlighted screw holes should align with the ones on your van.



Step 4

Using the provided phillips head screws (2 on each side). Secure your front mudflaps.

Please note the metal clips are not required.

Do not over-tighten the screws as you may thread the plastic lining.



Step 5

Repeat the process on the other side and your front mudflaps are secured! Please continue reading if you also need to fit your rear mudflaps.




REAR MUDFLAPS

Step 1

Identify the correct side of mudflap.

We will be fitting the offside mudflap, the process is the same on both sides.

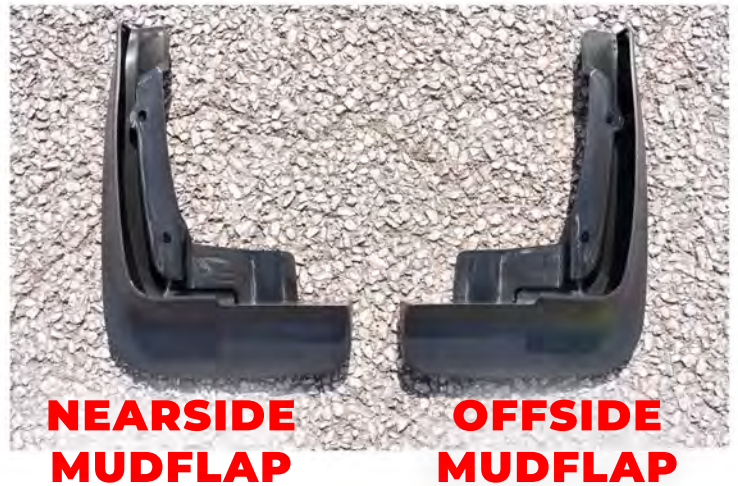

Step 2

On the rear side of the wheel arch you'll need to remove two screws from the plastic lining. Use a ratchet to remove the screws (they'll either be phillips head or T25 torx).

If you have large wheels, you may have to use a set of pliers and a ridged bit as you won't have space for a ratchet.



Step 3

Once the screws are removed. Offer up the mudflap to your van's bodywork. It should slot into place and the highlighted screw holes should align with the ones on your van.



Step 4

Using the provided phillips head screws (2 on each side). Secure your rear mudflaps.

Please note the metal clips are not required.

Do not over-tighten the screws as you may thread the plastic lining.



Step 5

Repeat the process on the other side and your rear mudflaps are secured!





WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 [veedubtransporters](https://www.instagram.com/veedubtransporters)

 [Vee Dub Transporters](https://www.facebook.com/VeeDubTransporters)

For any further assistance please contact our Customer Services Team

WWW.VEEDUBTRANSPORTERS.CO.UK/CONTACT-US

