



WWW.VEEDUBTRANSPORTERS.CO.UK

(HEADLIGHT EYEBROWS) FITTING INSTRUCTIONS



Required Tools

- Isopropyl Alcohol
- Microfibre Cloth

Time Needed



~10 Minutes

Difficulty



Easy

Hard

Step 1

Firstly, we advise on heating the rear adhesive strips by simply placing them onto a radiator for a couple of minutes.

Secondly, open the bonnet of your van to reveal the top of the headlights.



Step 2

Now clean the top of the headlights which is where the adhesive tape will be stuck to. We recommend using isopropyl alcohol and a microfibre cloth for this.


This will ensure maximum affect for the adhesive tape.



Step 3

Grab each headlight eyebrow and compare the shape and curvature to your Transporters headlights.

Please see the right hand side image for reference.

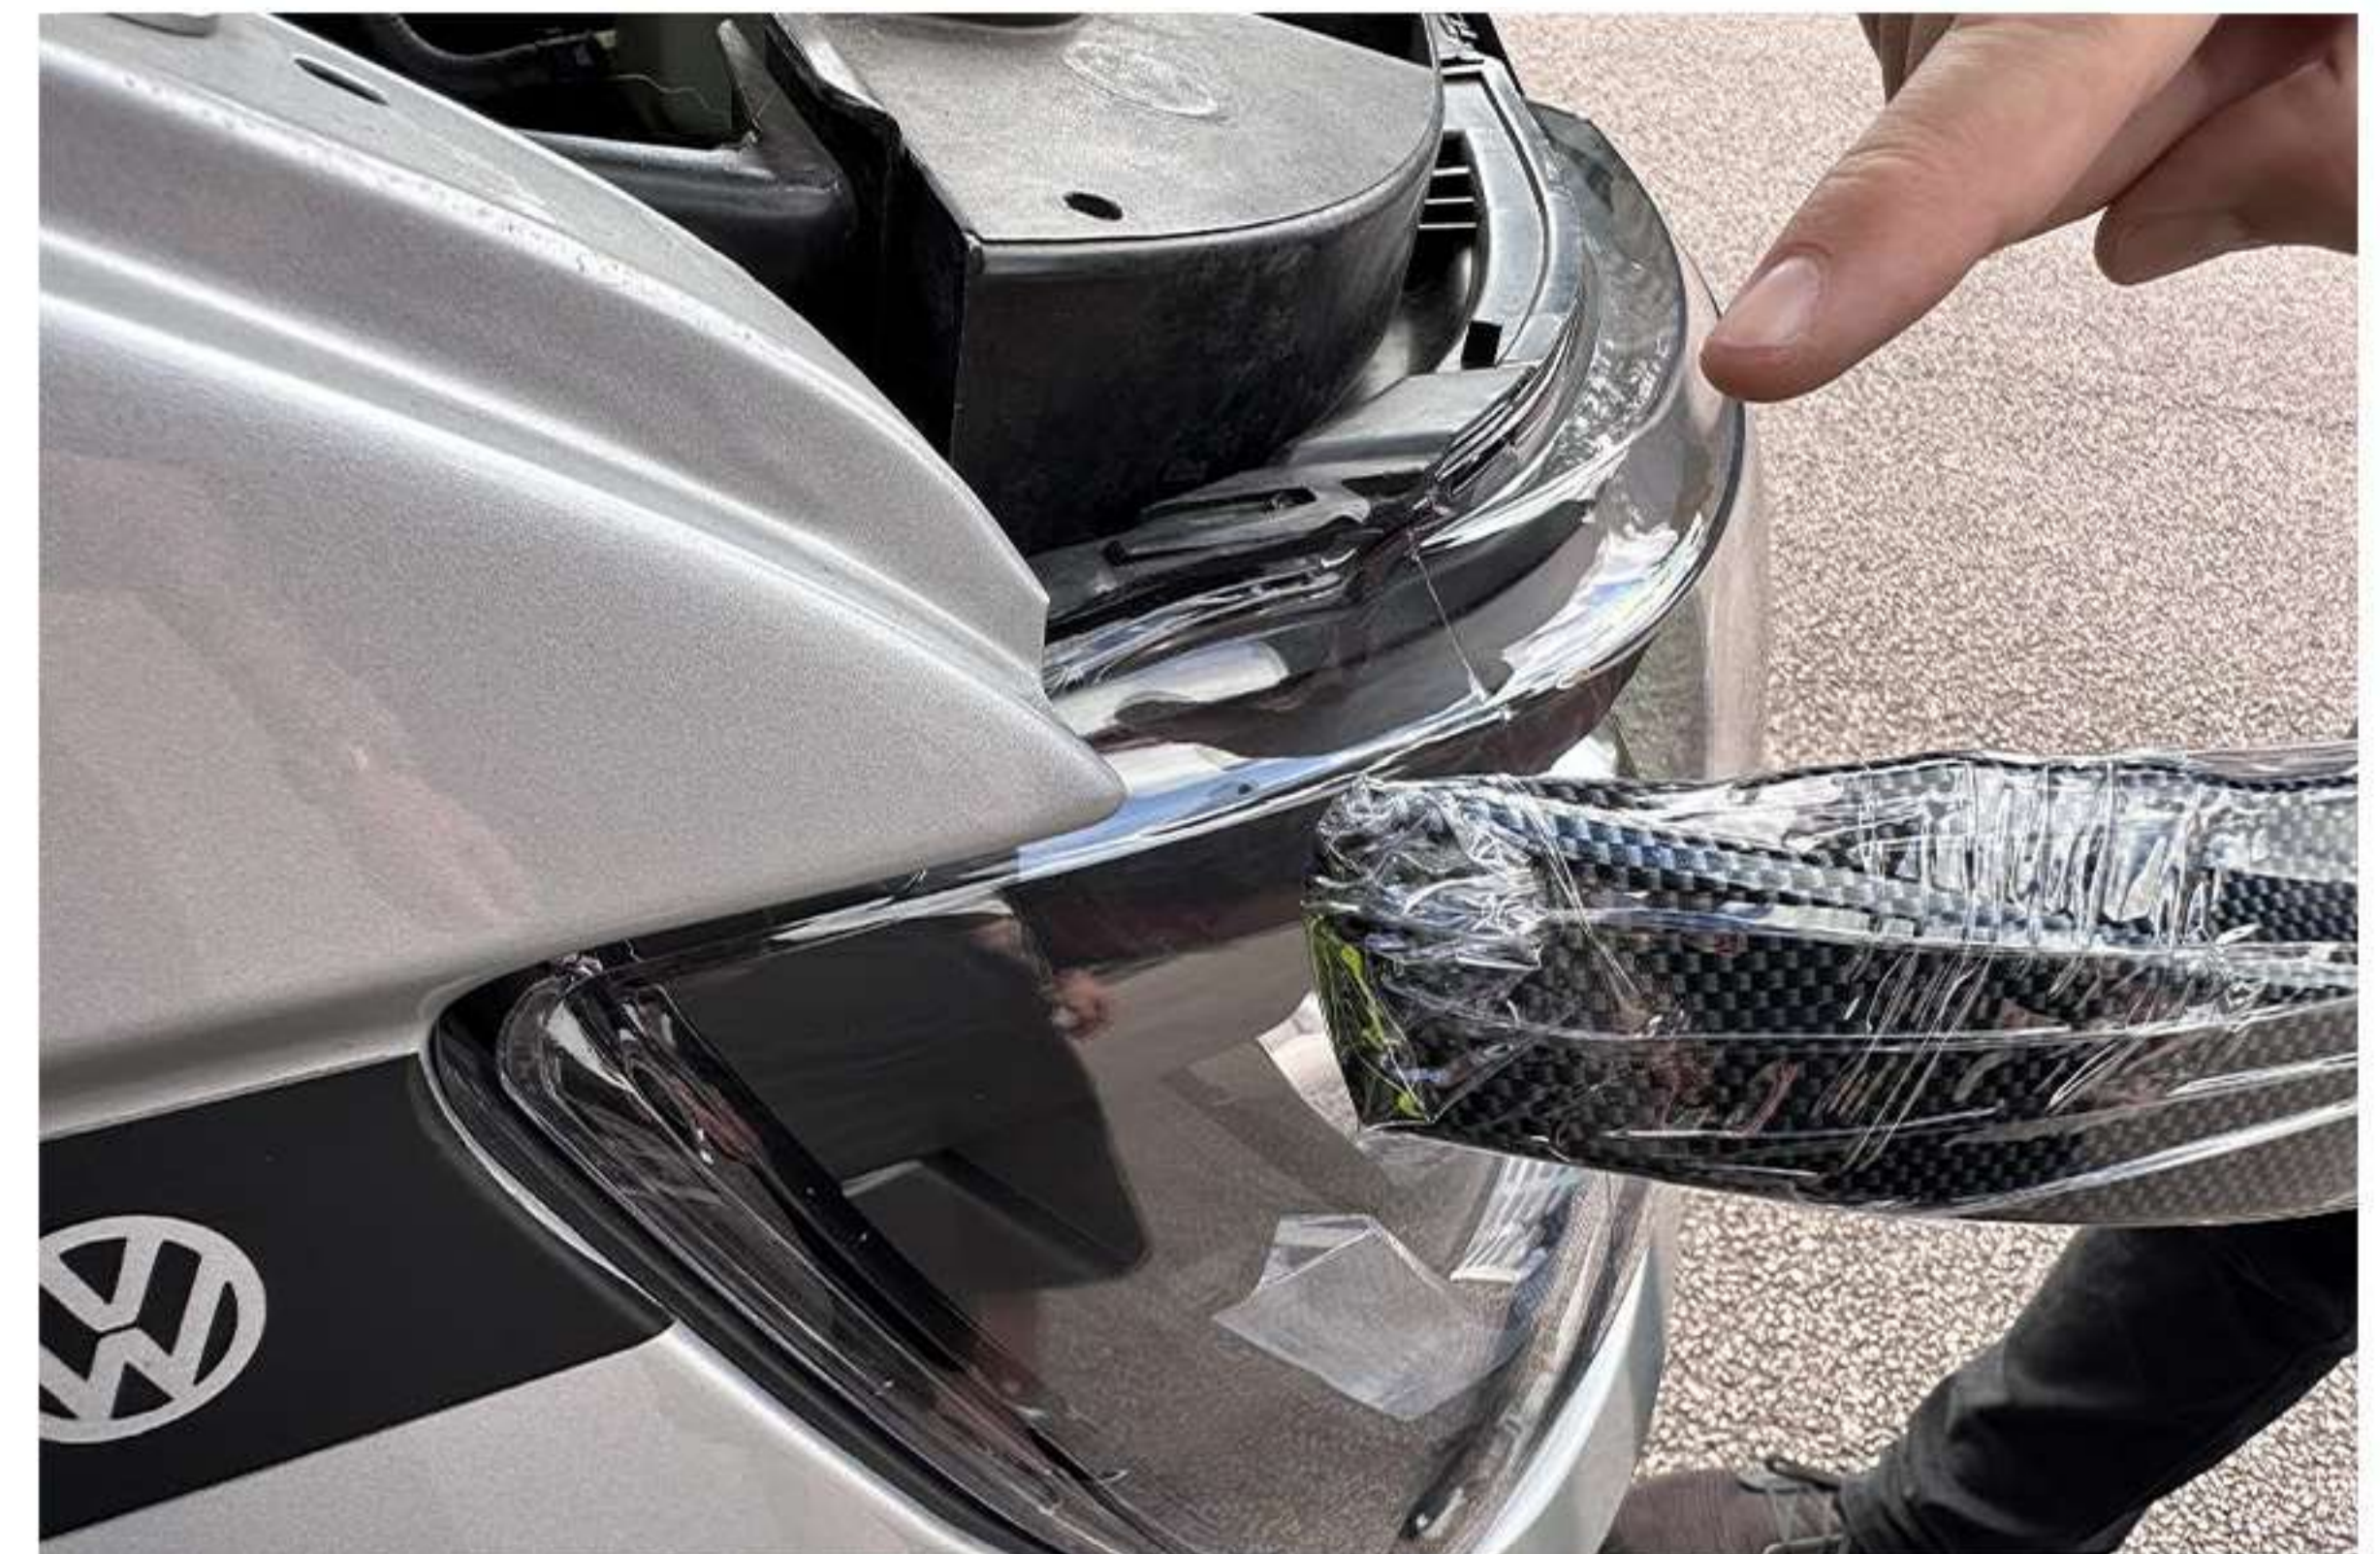

Step 4

Next, remove the protective film and the top of the adhesive strips.


This will reveal the grey sticky sides.



Step 5

Now line up the headlight eyebrow with the top of the headlight and make sure that both sides are contouring.

You will see that they have been manufactured to match up with the van.

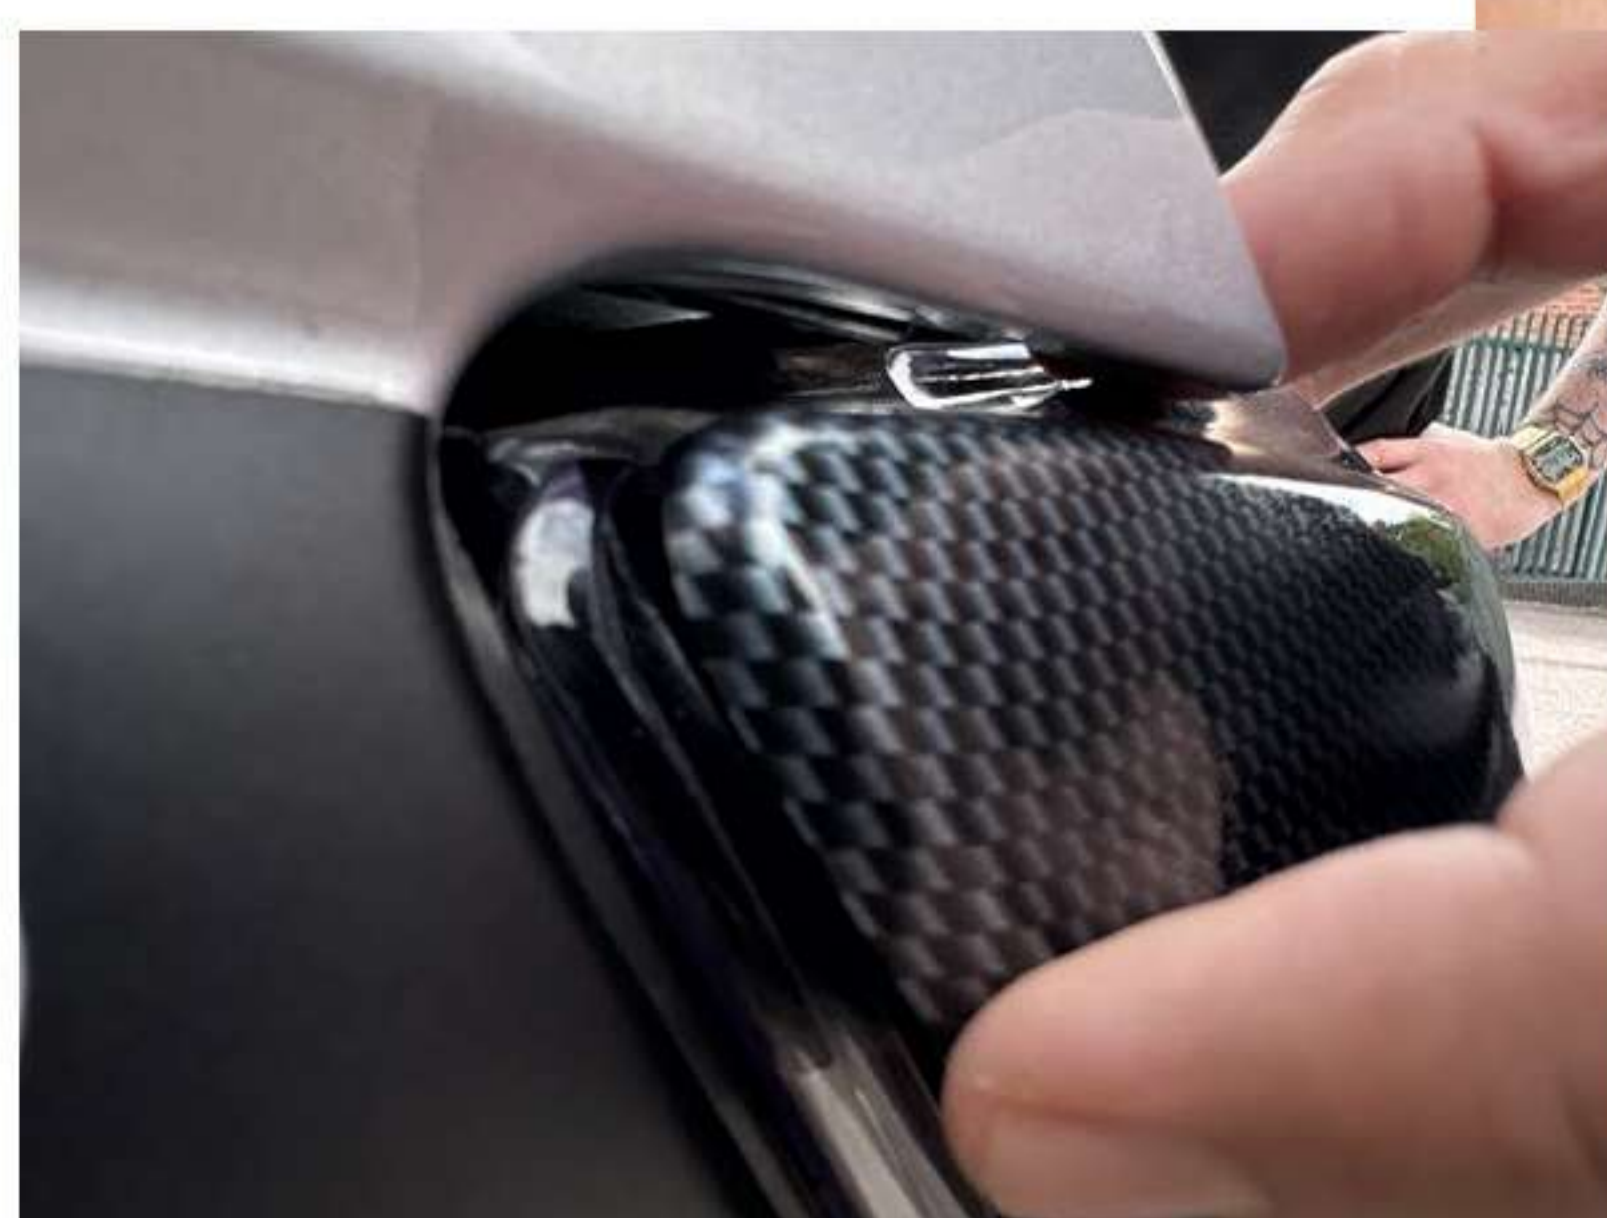

Step 6

Once both sides have been aligned, push and hold the headlight eyebrow down for 30 seconds to 1 minute.



Step 7

Your headlight eyebrow is now fitted! Repeat this process on the opposite side.





WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 **veedubtransporters**

 **Vee Dub Transporters**

For any further assistance please call our Customer Services Team



0116 409 1911

