



WWW.VEEDUBTRANSPORTERS.CO.UK

WING MIRROR COVERS FITTING INSTRUCTIONS



Required Tools

- Trim Removal Tools

Time Needed



~10 Minutes

Difficulty



Easy

Hard

Step 1

Firstly, to remove the original mirror cover you will need to detach the mirror glass.

You can do this by prying around the bottom or side of the mirror glass.


The mirror glass will now be released, but remains attached to the wiring.



Step 2

Now run the trim removal tool down the edge of the wing mirror cover, until the mirror cover clips have been unattached.

Once you have removed the original mirror cover, make sure that the aerial module tabs are in the correct areas.

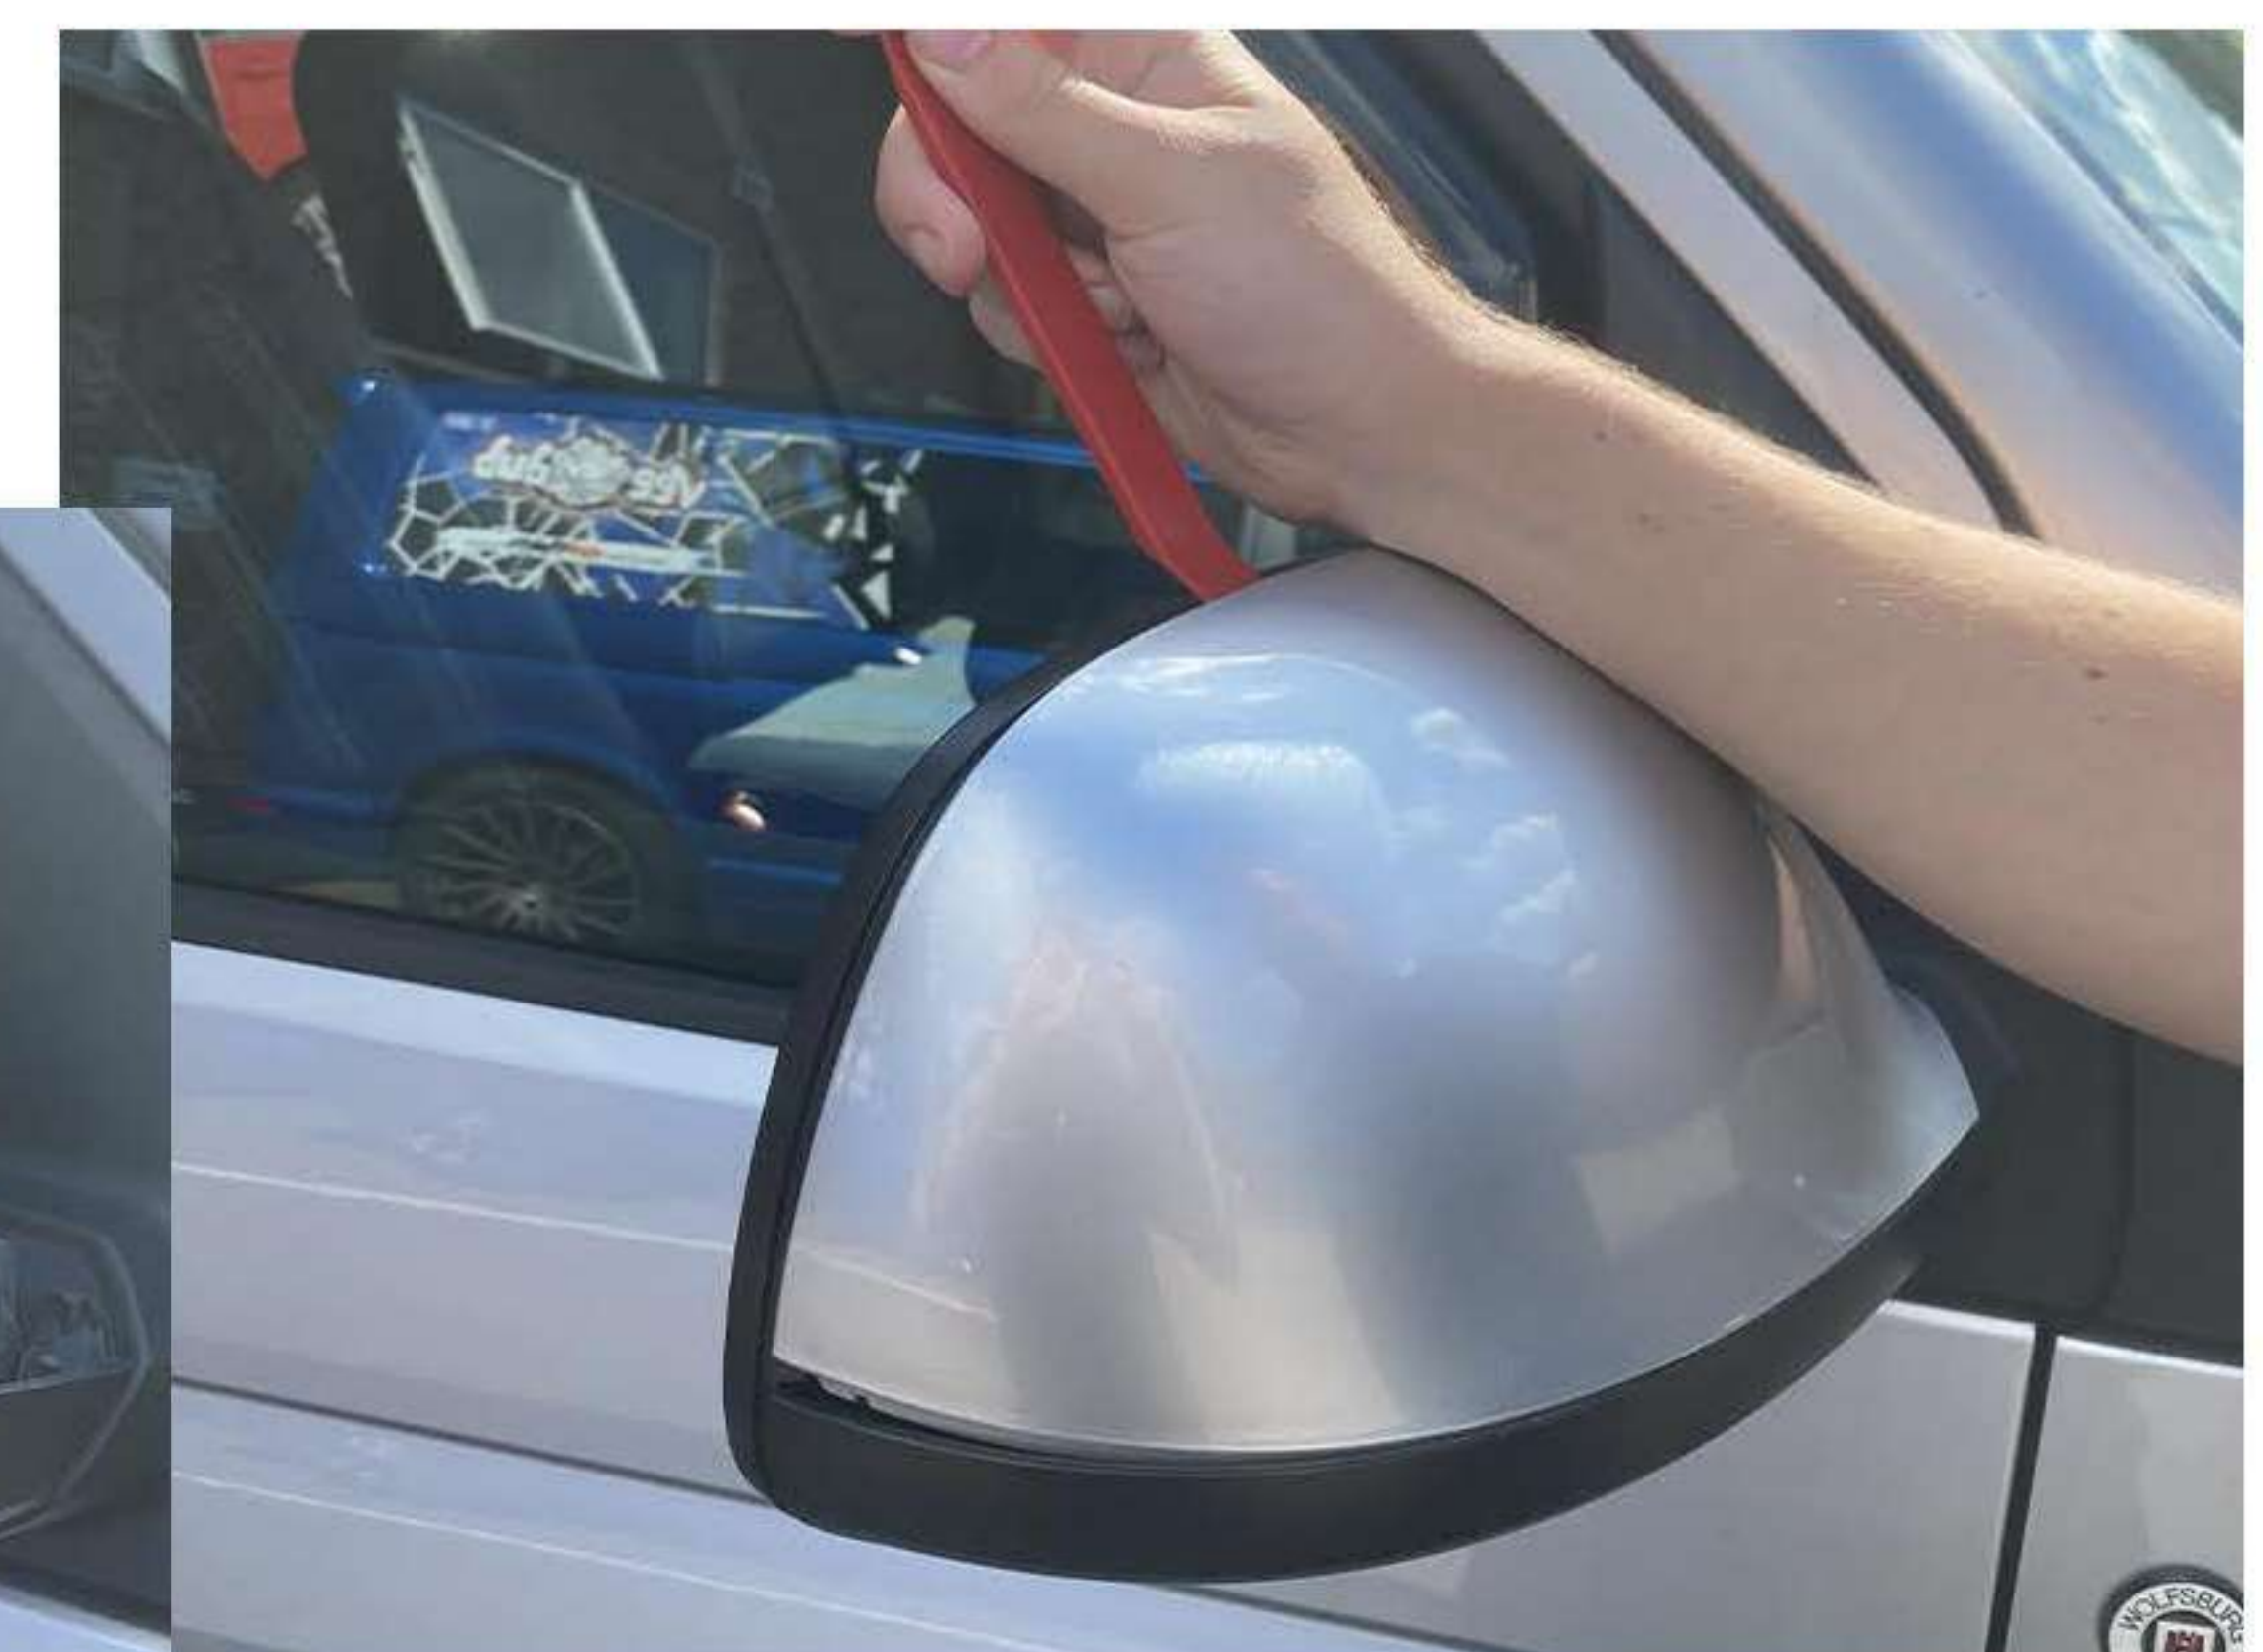

Step 3

Grab your new wing mirror cover, offer it up so that both sets of clips are in line with each other.



Step 4

Push down gently, so that the clips attach together & check that there is no gaps, ensuring you have heard a clicking sound.



Step 5

Now line up the mirror glass and push it back into place. Once clicked into place, make sure to test the movement of your glass with the inside wing mirror switch.

Your new wing mirror cover has now been installed! Repeat the appropriate steps on the opposite side of your van for the remaining wing mirror cover.






WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 **veedubtransporters**

 **Vee Dub Transporters**

For any further assistance please call our Customer Services Team



0116 409 1911

