



WWW.VEEDUBTRANSPORTERS.CO.UK

VW T5/T6 BUMPER PROTECTOR FITTING INSTRUCTIONS



Required Tools

- Isopropyl Alcohol

- Microfibre Cloth

Time Needed



~10 minutes

Difficulty



Easy

Hard

Step 1

Warm the adhesive strips on the back of the bumper protector to ensure the adhesive creates a good bond.



Step 2

Clean the back of your bumper with a microfibre cloth and isopropyl alcohol.



Step 3

Peel the two small end pieces of tape off.



Step 4

Then, with the two pieces of tape that span the length of the protector, peel the ends up on one side and fold them so that they stick over the edge.




Step 5

Now, with your rear door(s) open, position the bumper protector, making sure to align the contoured end pieces to your van's bodywork.



Step 6

Then slowly pull on the red tabs to remove them.

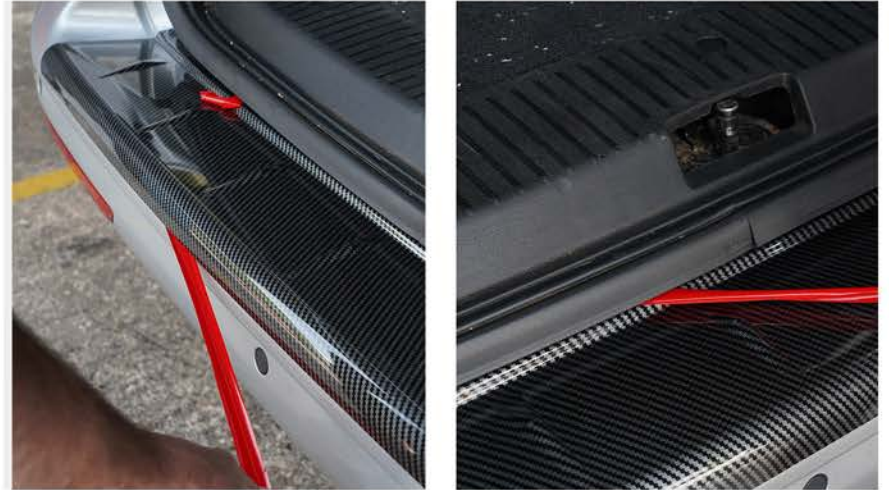

Step 7

Press firmly on your bumper protector for around 2 minutes to ensure the adhesive has bonded.



Step 8

The process is complete! Enjoy your new bumper protector.





WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 [veedubtransporters](https://www.instagram.com/veedubtransporters)

 [Vee Dub Transporters](https://www.facebook.com/VeeDubTransporters)

For any further assistance please contact our Customer Services Team

WWW.VEEDUBTRANSPORTERS.CO.UK/CONTACT-US

