



WWW.VEEDUBTRANSPORTERS.CO.UK

VW T6.1 DUB STYLE FRONT SPLITTER FITTING INSTRUCTIONS



Required Tools


- Phillips Head Screwdriver
- Masking Tape
- Another pair of hands!

Time Needed



~30 minutes

Difficulty

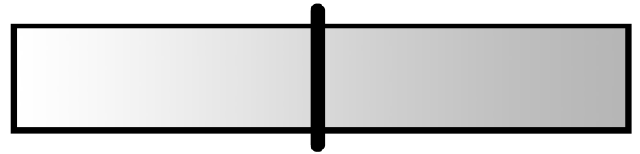

Easy

Hard

Step 1

Apply lengths of masking tape to the front of your van and fold them back on themselves. The tape needs to be long enough to reach the Dub Style Splitter once offered up to the van.



Step 2

With a spare pair of hands, offer the Splitter up to the van.

Once you're happy with the positioning of the Splitter, use the tape to hold it in place.



Step 3

Make sure the back of the splitter aligns with your spoiler.



Step 4

Secure the splitter with 8 of the provided self tapping screws using the pre-drilled holes on the underside as a guide.

Don't over tighten the screws as this will thread the plastic.



Step 5

Finally, remove the tape and your splitter is fitted!





WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 [veedubtransporters](https://www.instagram.com/veedubtransporters)

 [Vee Dub Transporters](https://www.facebook.com/VeeDubTransporters)

For any further assistance please contact our Customer Services Team

WWW.VEEDUBTRANSPORTERS.CO.UK/CONTACT-US

