



WWW.VEEDUBTRANSPORTERS.CO.UK

VW T6.1 DUB STYLE FRONT SPOILER FITTING INSTRUCTIONS



Required Tools

- Phillips Head Screwdriver
- Isopropyl Alcohol
- Microfibre Cloth
- Masking Tape
- Latex Gloves
- Another pair of hands!

Time Needed



~1 hour 30 minutes

Difficulty



Easy

Hard

Step 1

Ensure you're in a relatively warm environment before starting the fitment of the spoiler. The adhesive will not activate properly if cold.

Clean the front section of your van using isopropyl alcohol and a microfibre cloth.



Step 2

Apply lengths of masking tape to the front of your van and fold them back on themselves. The tape needs to be long enough to reach the Dub style spoiler once offered up to the van.



Step 3


Offer the spoiler up to the van and temporarily apply the tape to ensure a good fit.

Once you're happy with the positioning, remove the spoiler.



Step 4

Put on a pair of latex gloves & use one of the primer wipes to prep the spoiler in the highlighted areas.

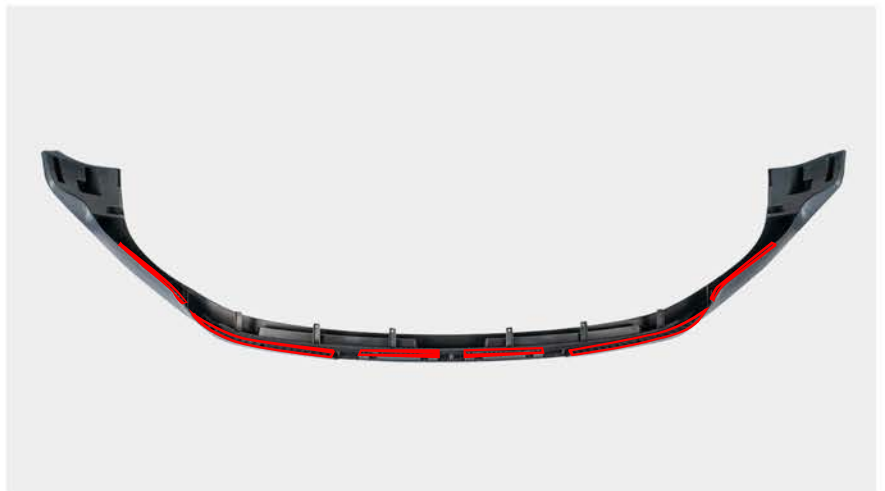

Step 5

Now apply the supplied adhesive strips onto the spoiler.

Peel the brown side of the tape off and apply this side to the primed plastic. Once complete, it will look like the picture.



Step 6

Now that the adhesive strips are applied, peel the end up on each of them and fold it so that it's pointing upwards.

This will create a pull tab when you offer the spoiler up to your van.



Step 7

Now, using the remaining wipes, prime the front bumper in the areas where the adhesive strips will be in contact.



Step 8

Once the wipe residue has dried, using a spare pair of hands, offer the spoiler up to your bumper. The easiest way to do this is to go from underneath, first hooking the spoiler around the wheel arches and then pushing upwards.



Step 9

With the spoiler in place, slowly pull away the red strips of adhesive tape. Press firmly on the spoiler to activate the adhesive.



Step 10

Re-apply the masking tape to hold the spoiler in place while you're removing the red strips.



Step 11

Next using the provided self-tapping screws and a phillips head screwdriver secure your spoiler to the bumper.

There are six tabs underneath the spoiler that'll need to be screwed onto your bumper.



Step 12

Using the remaining four screws (two on each side) secure the spoiler to the wheel arches. You may have to drill a small guide hole as the plastic here is very hard.



Step 13

Finally, remove the masking tape.

The process is complete!





WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 [veedubtransporters](https://www.instagram.com/veedubtransporters)

 [Vee Dub Transporters](https://www.facebook.com/VeeDubTransporters)

For any further assistance please contact our Customer Services Team

WWW.VEEDUBTRANSPORTERS.CO.UK/CONTACT-US

