



WWW.VEEDUBTRANSPORTERS.CO.UK

VW T5/T6 TWIN DOOR REAR SPOILER FITTING INSTRUCTIONS



Required Tools

- Bonding Adhesive
- Applicator Gun
- Isopropyl Alcohol


- Tape/Masking Tape
- Microfibre Cloth

Time Needed



~20 Minutes

Difficulty

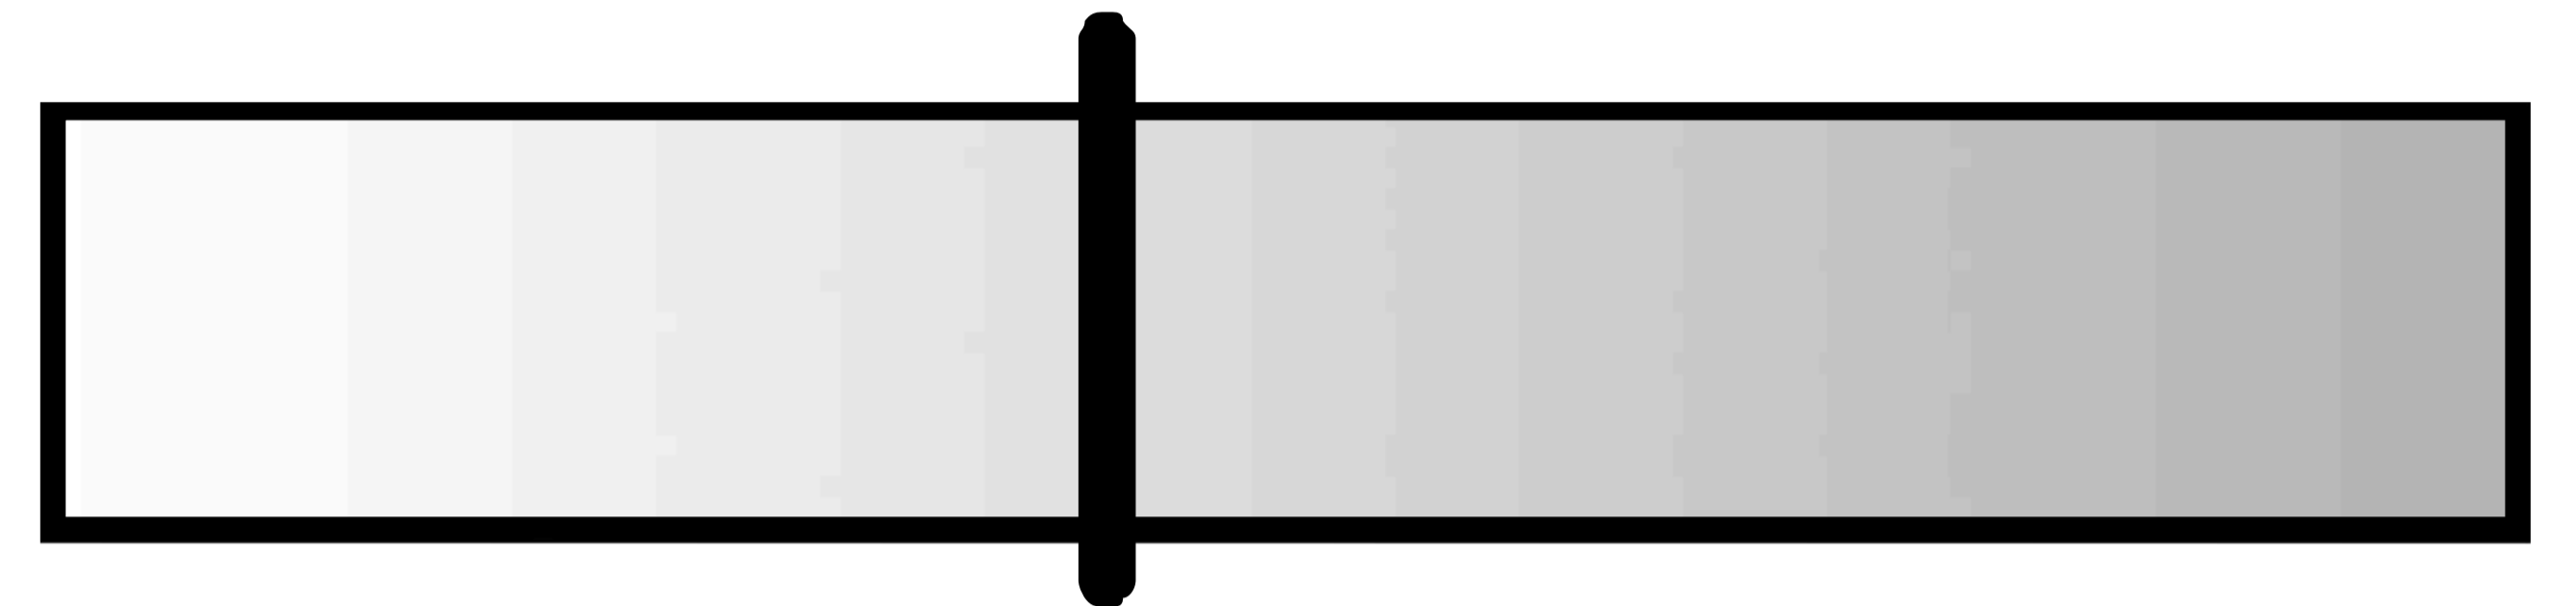


Easy

Hard

Step 1



Firstly, you will need to degrease and prepare the surface where your new spoiler is going to be applied onto.

This can be done by using isopropyl alcohol and a microfibre cloth.

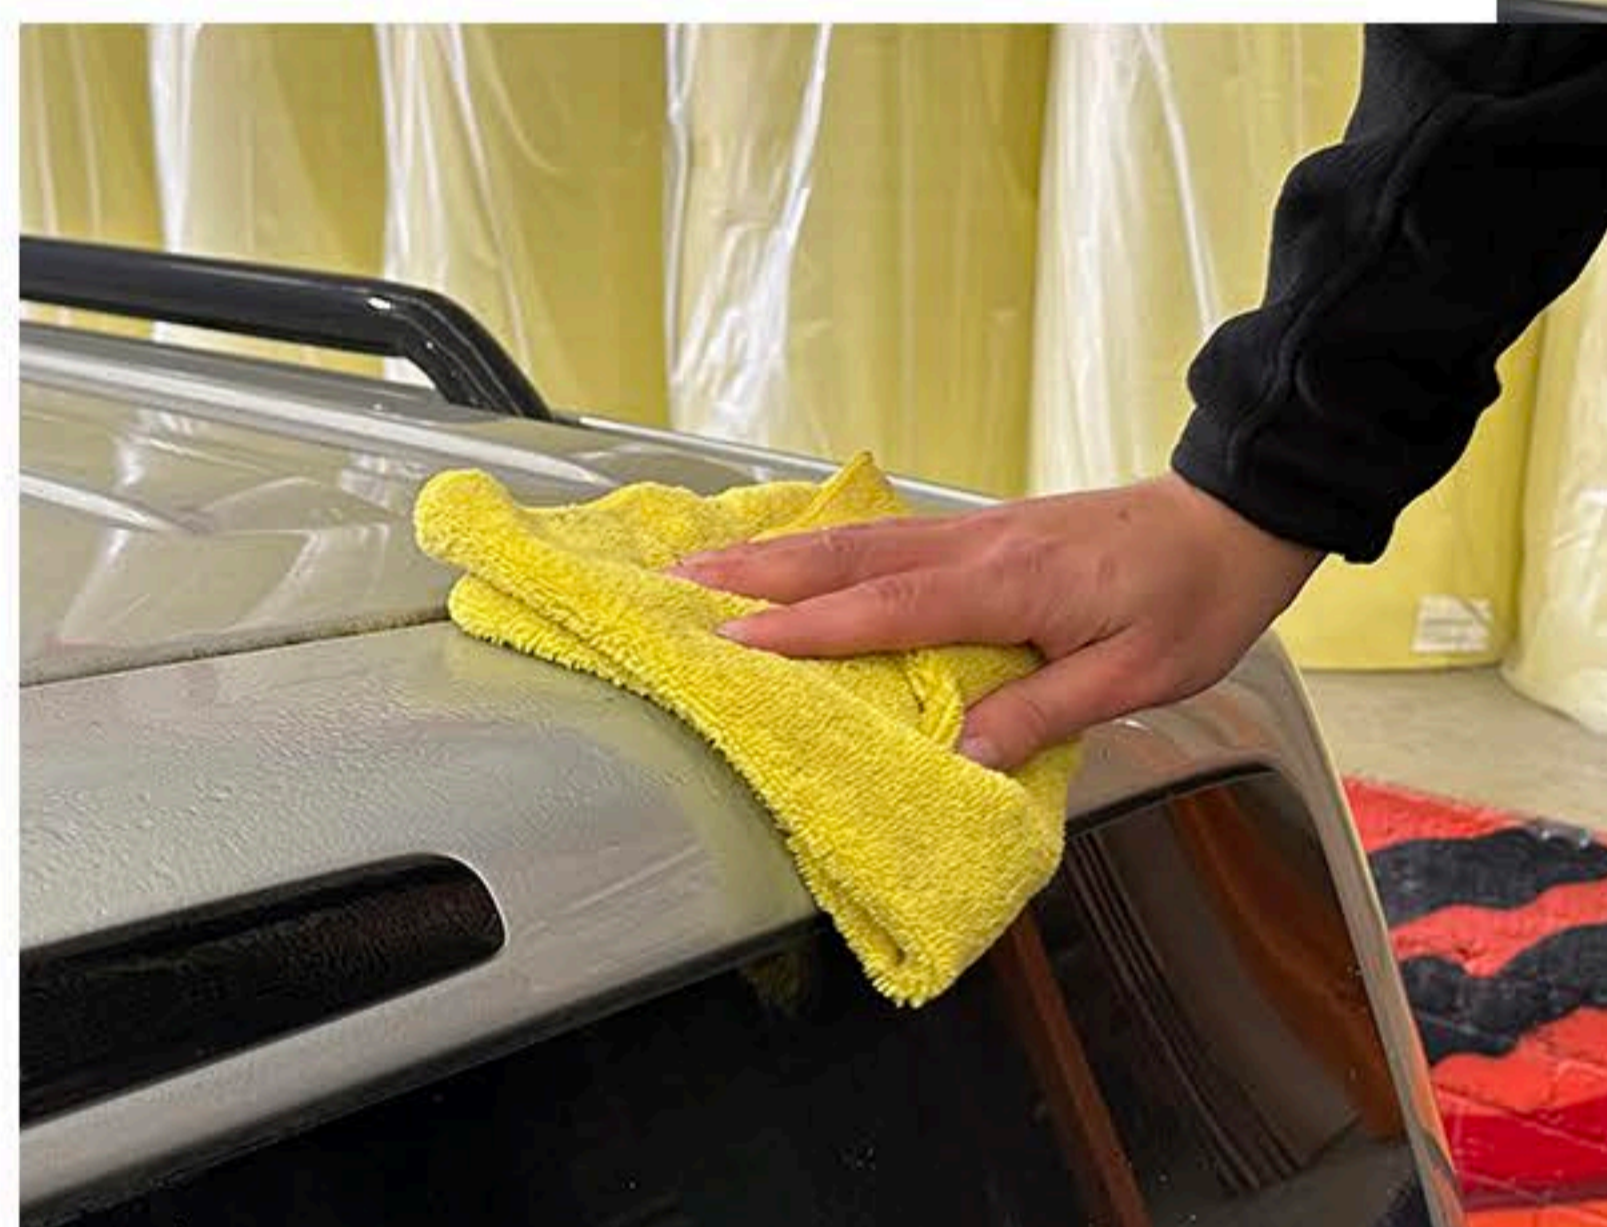

Step 2

Now, wipe clean the back of your new spoiler with your isopropyl alcohol and microfibre.

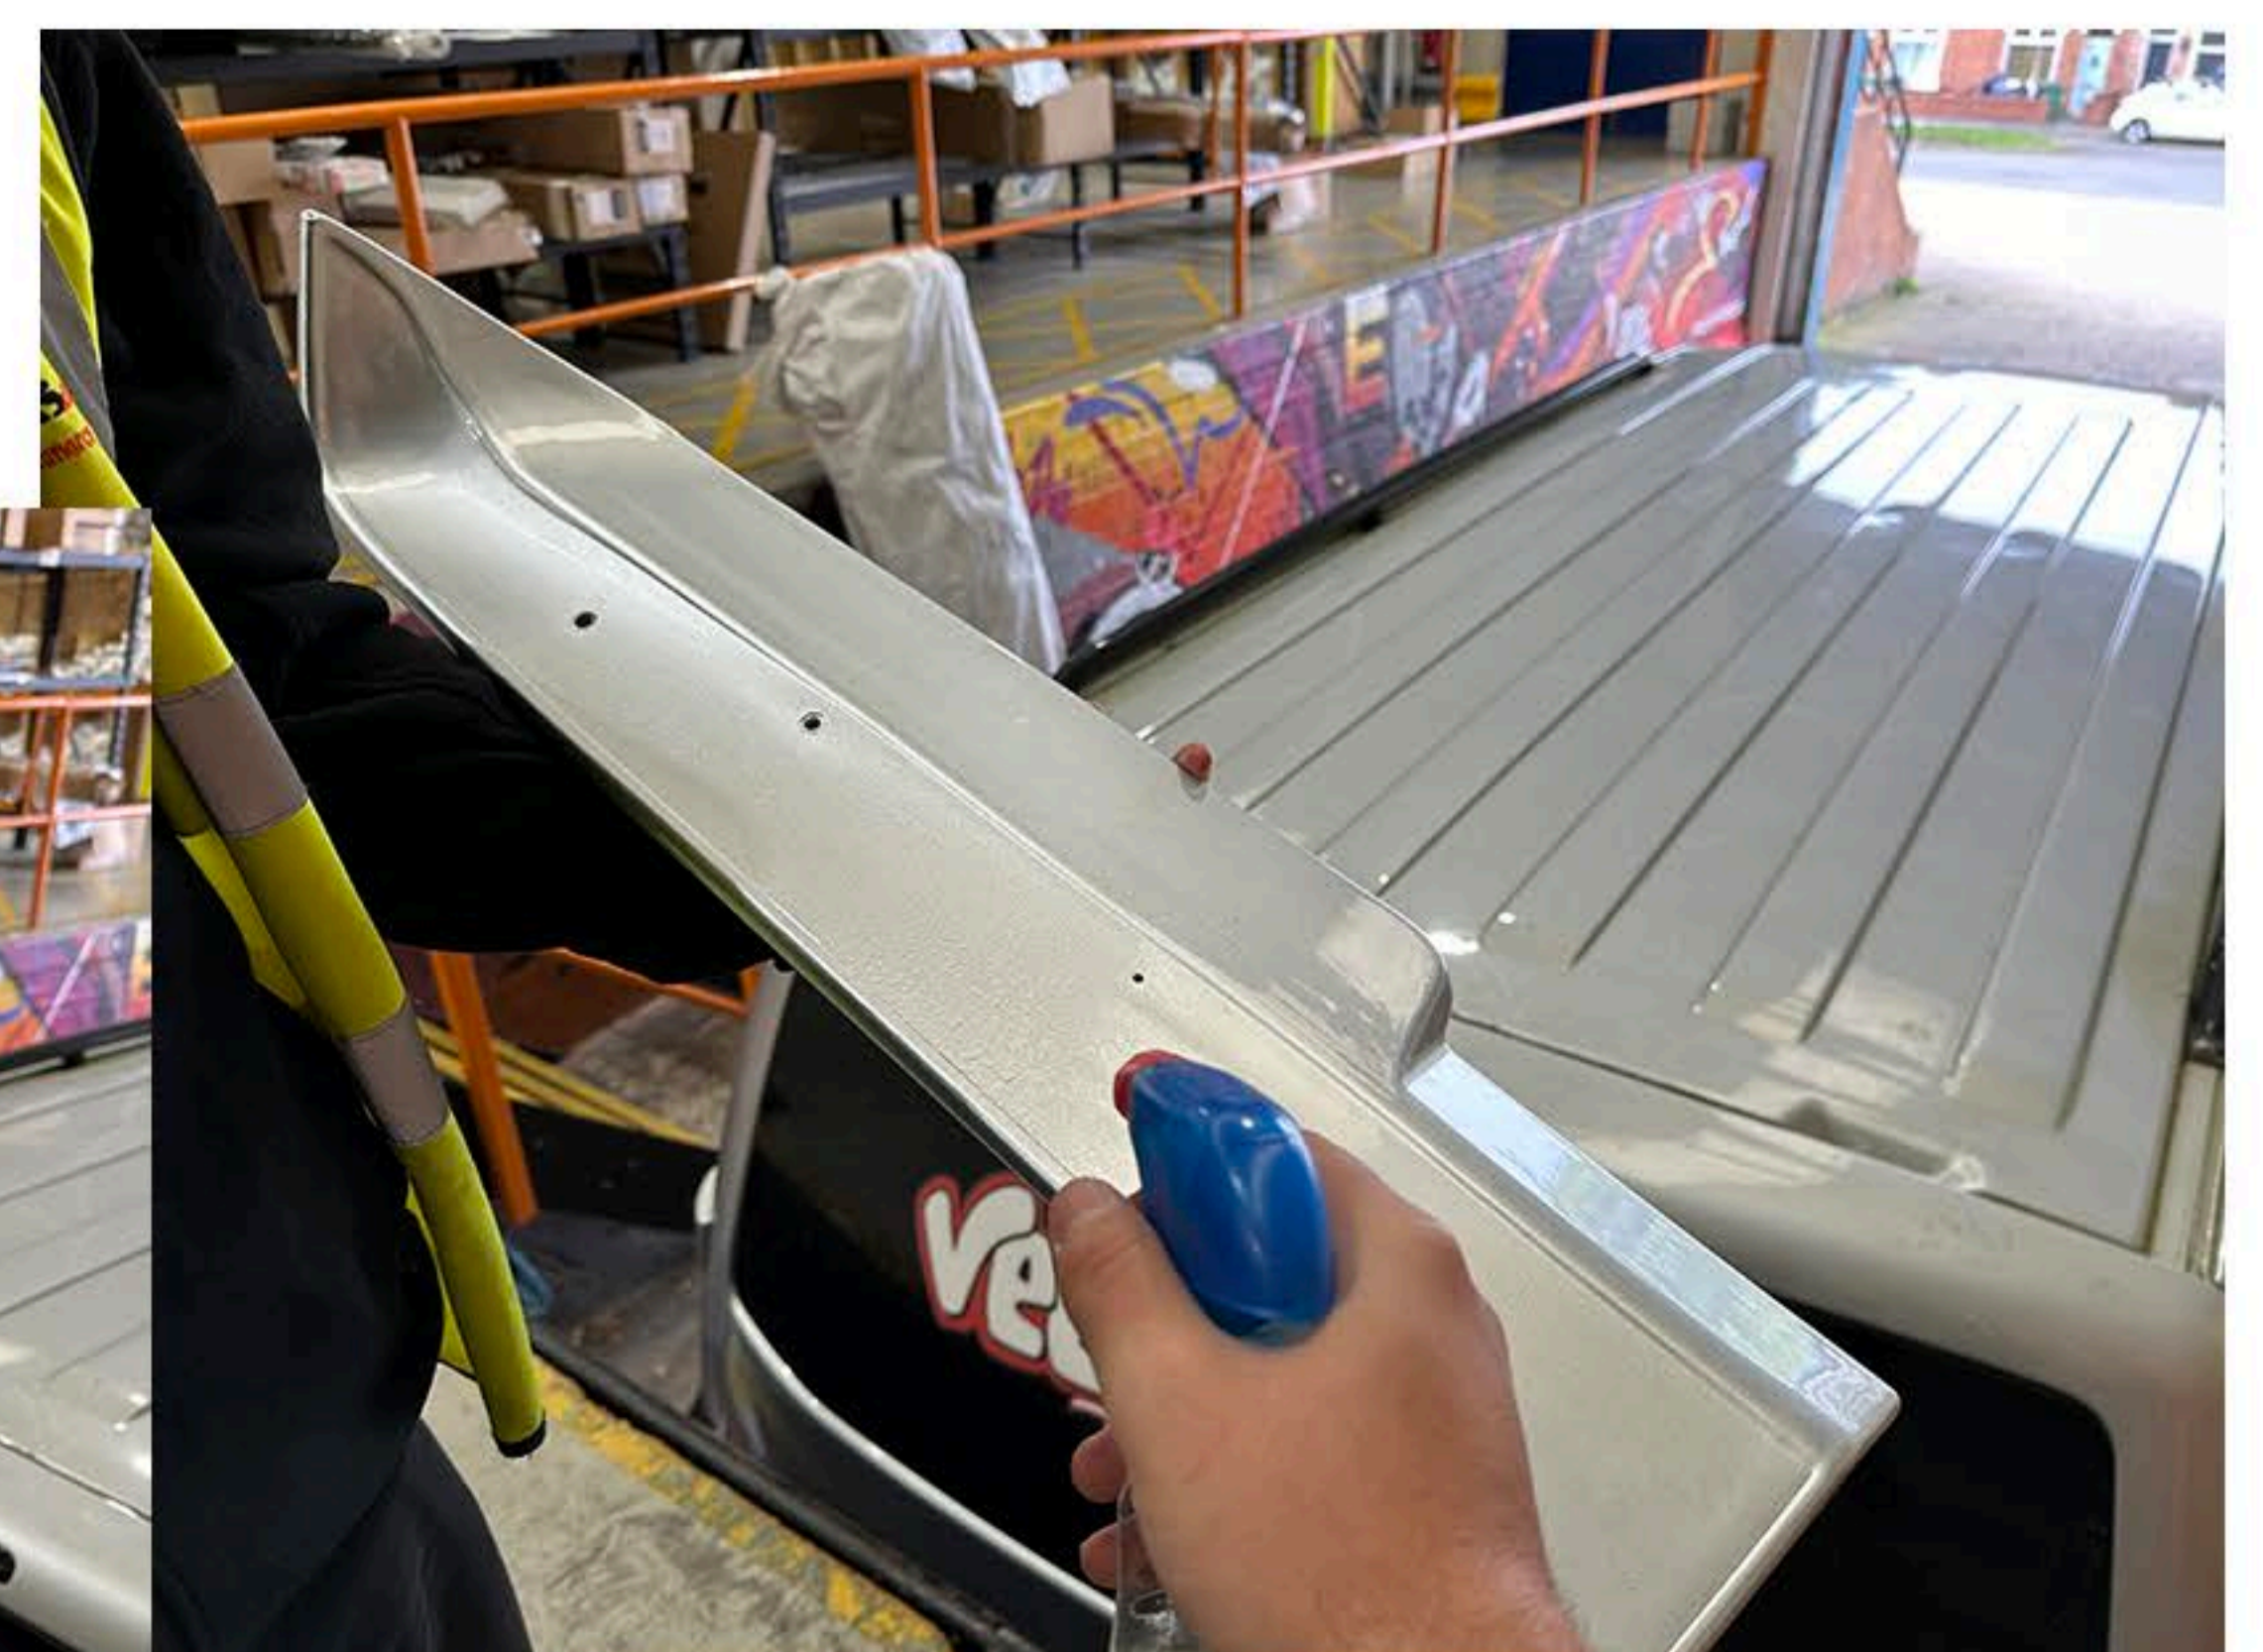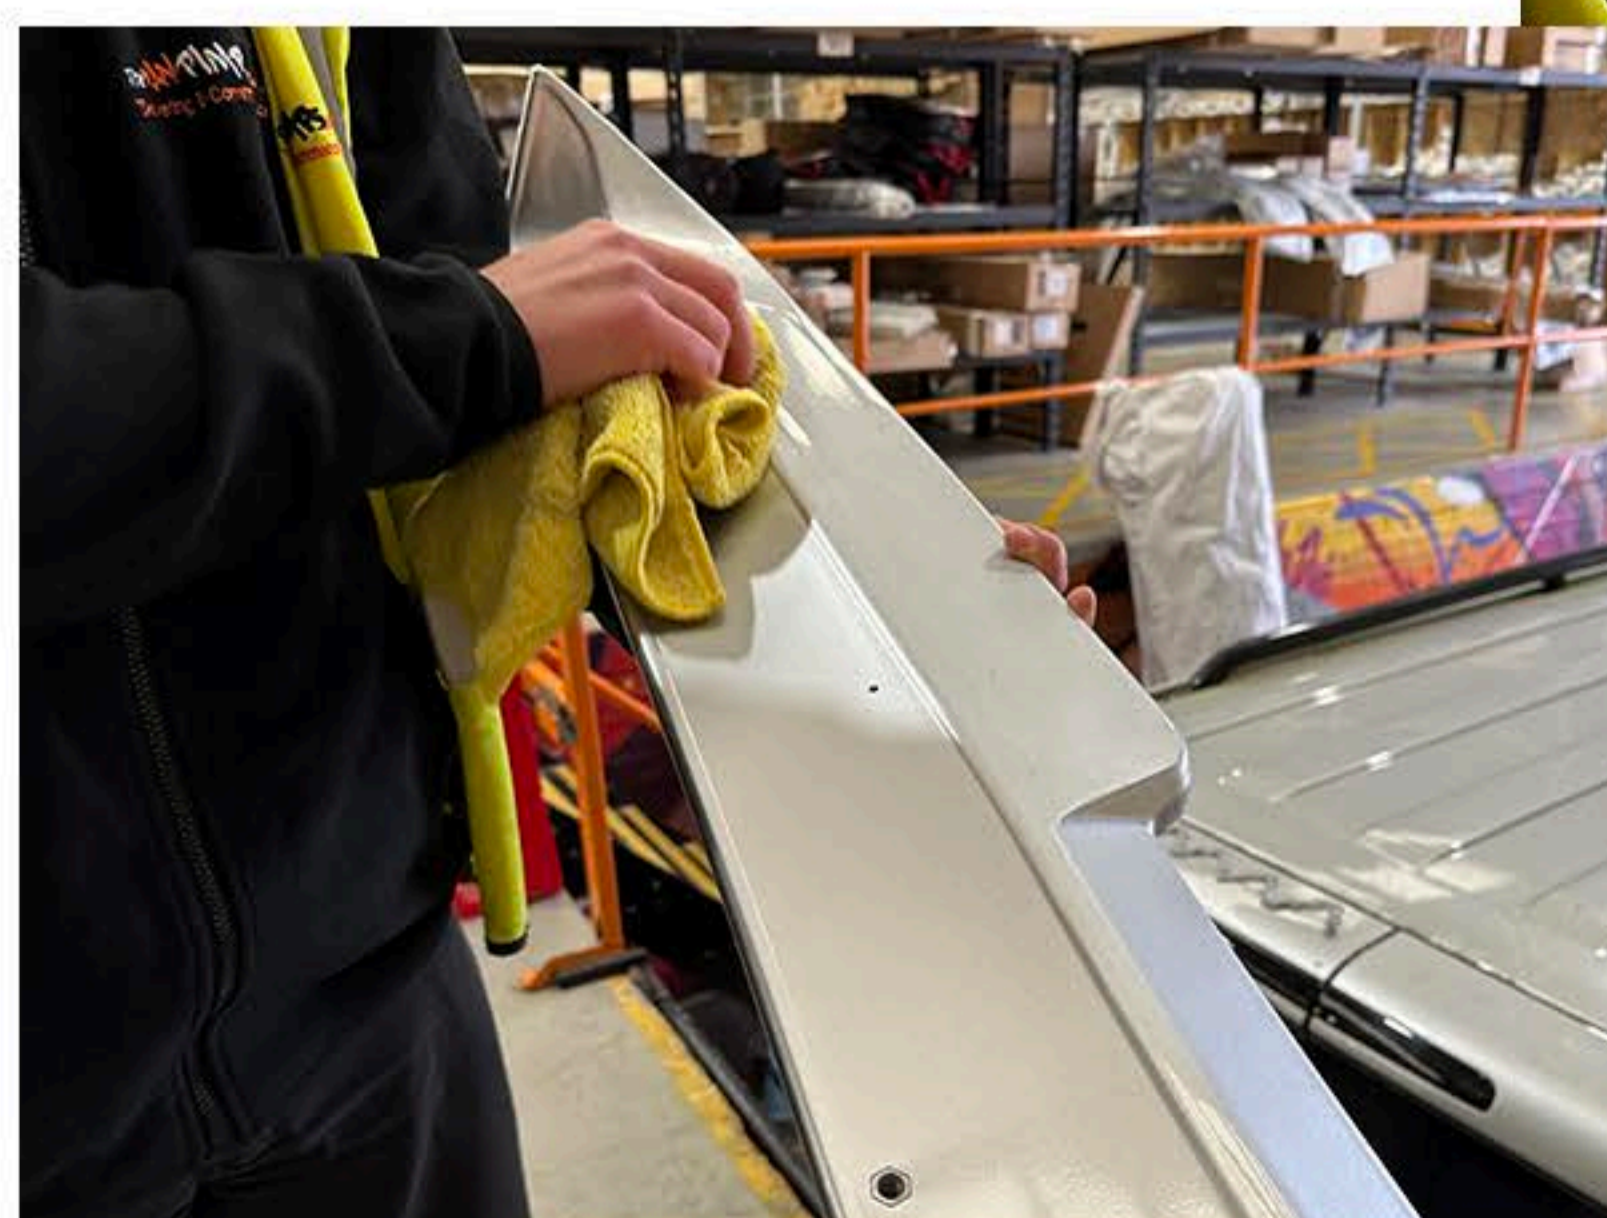


Step 3

Grab your bonding adhesive and applicator gun.

Apply the bonding adhesive to the rear of the vehicle where your new spoiler will sit.

Ensure you don't apply this too close to the edge to avoid any overspill when you come to pressing the spoiler.

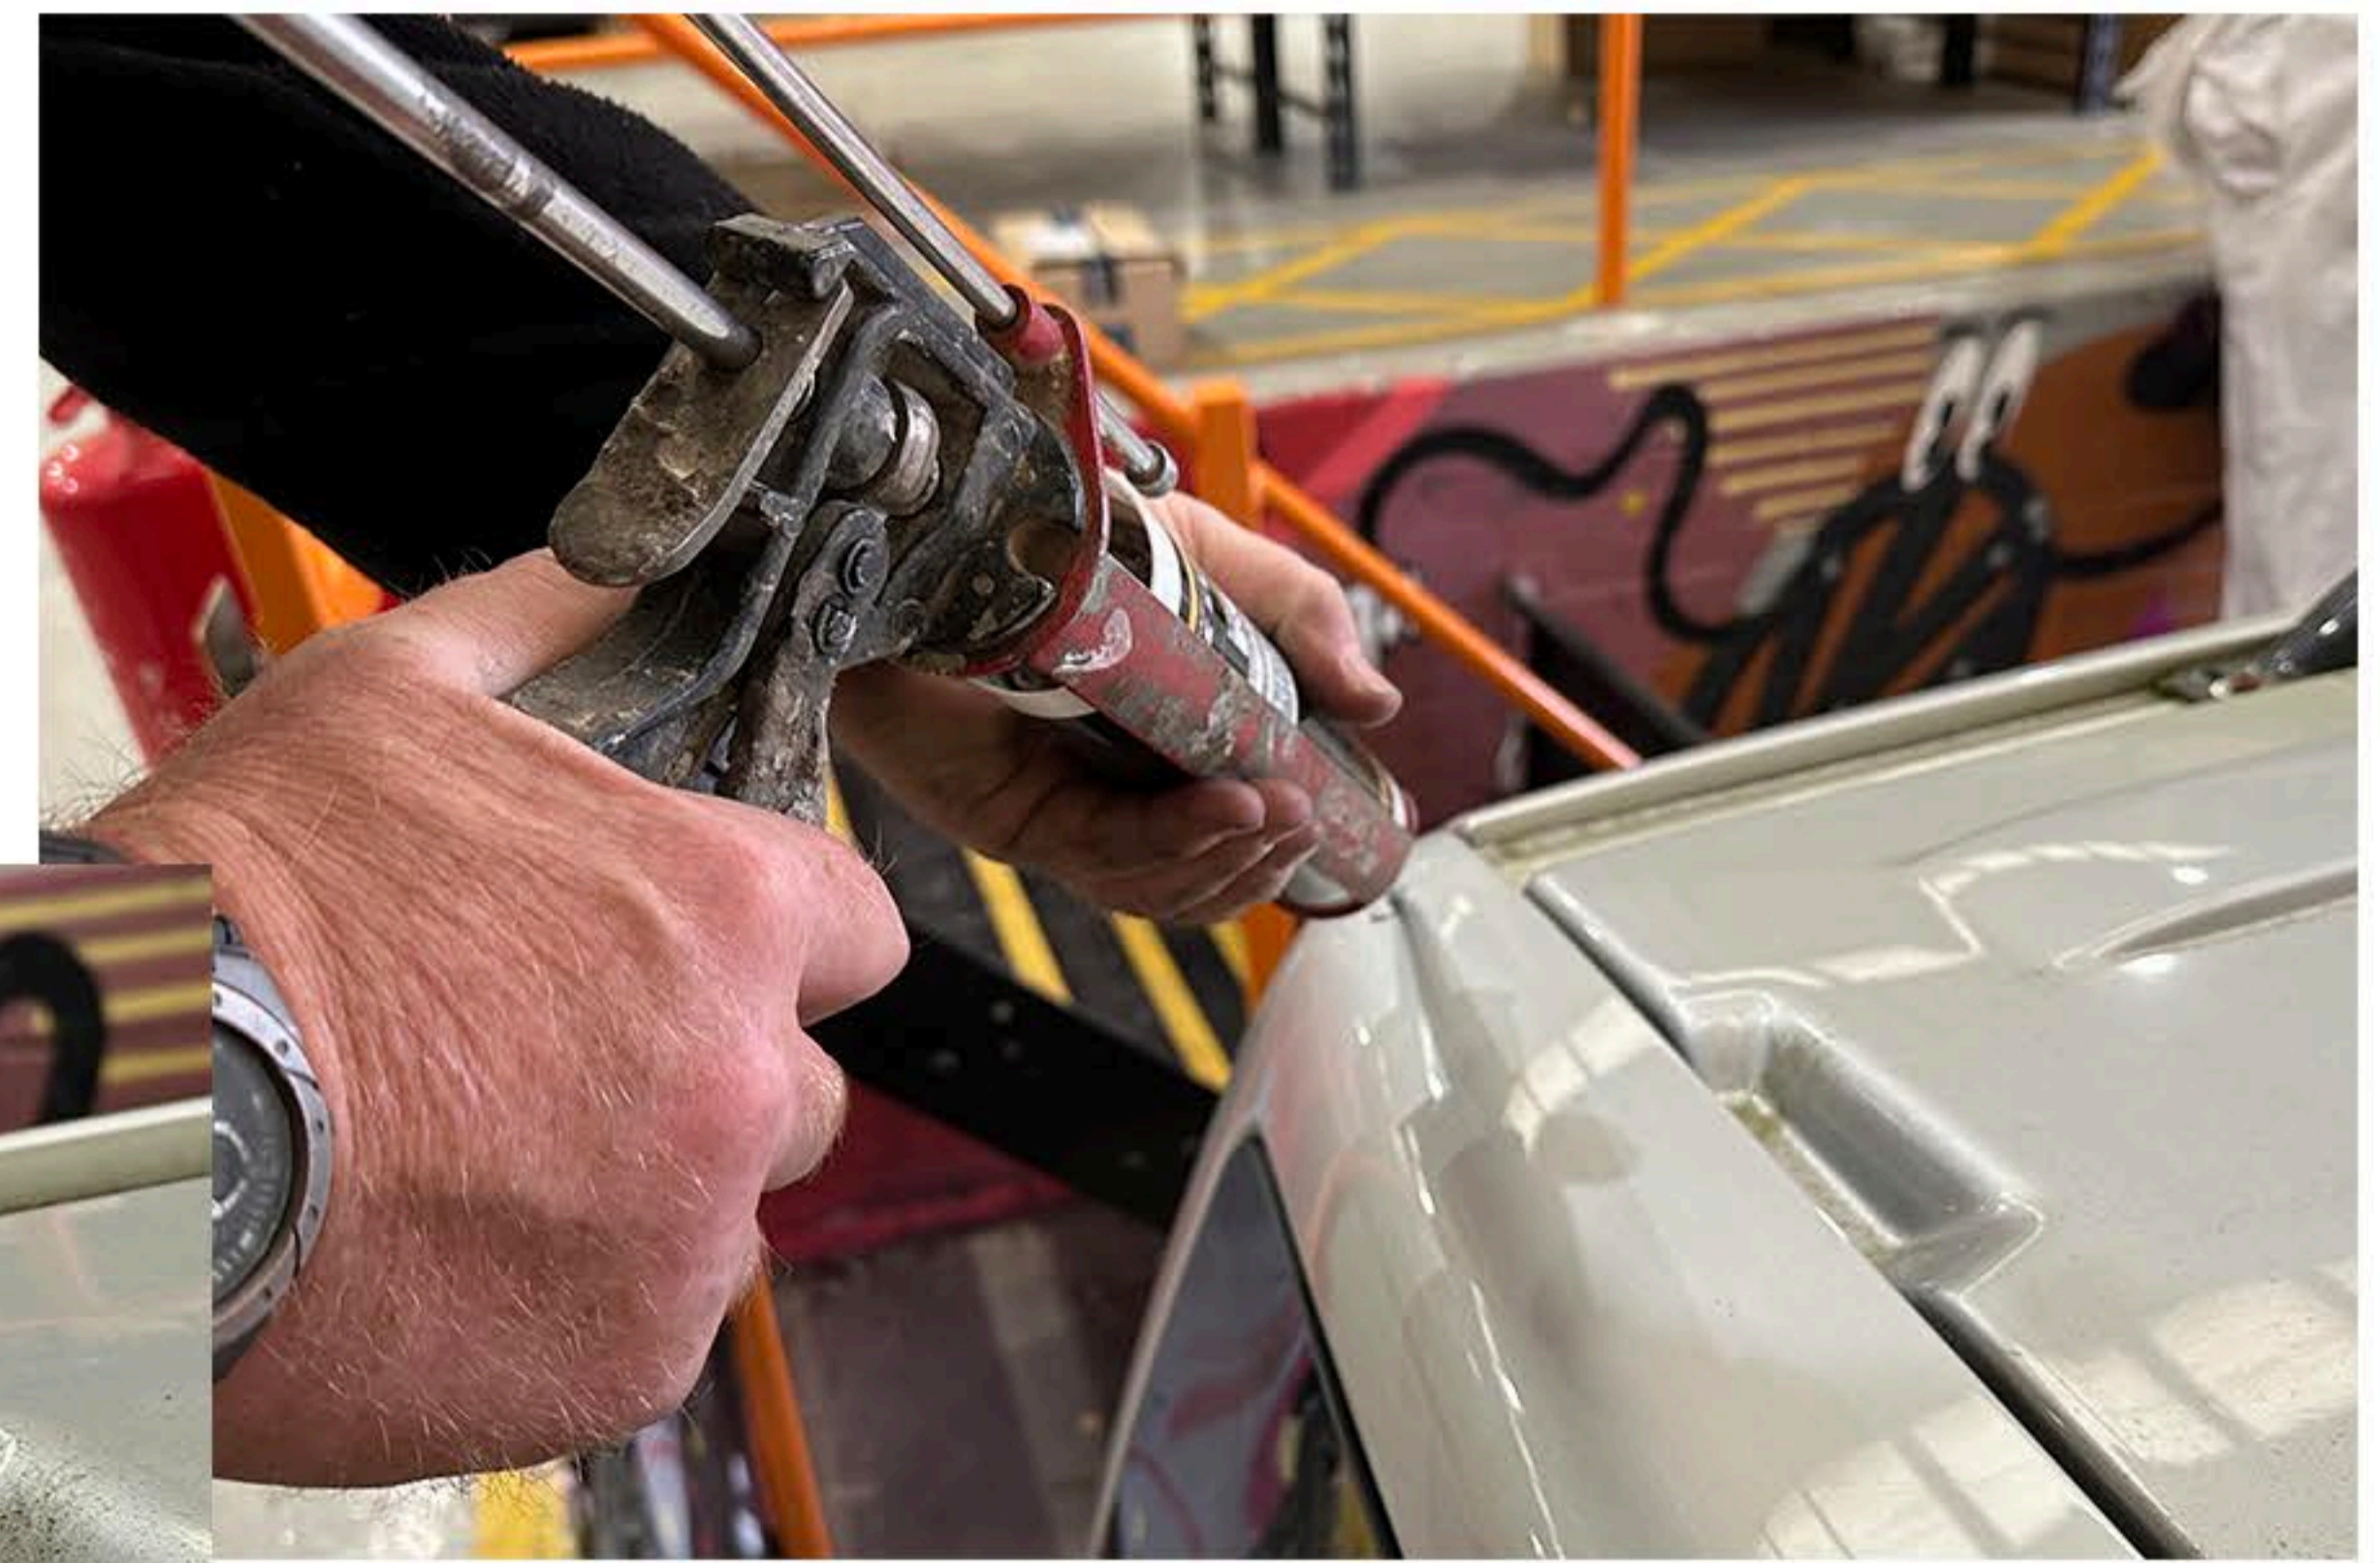


Step 4

Once you get to end of the panel, your bonding adhesive should look like this.



Step 5

Carefully line up your new spoiler and slowly push down once you are happy with the alignment.

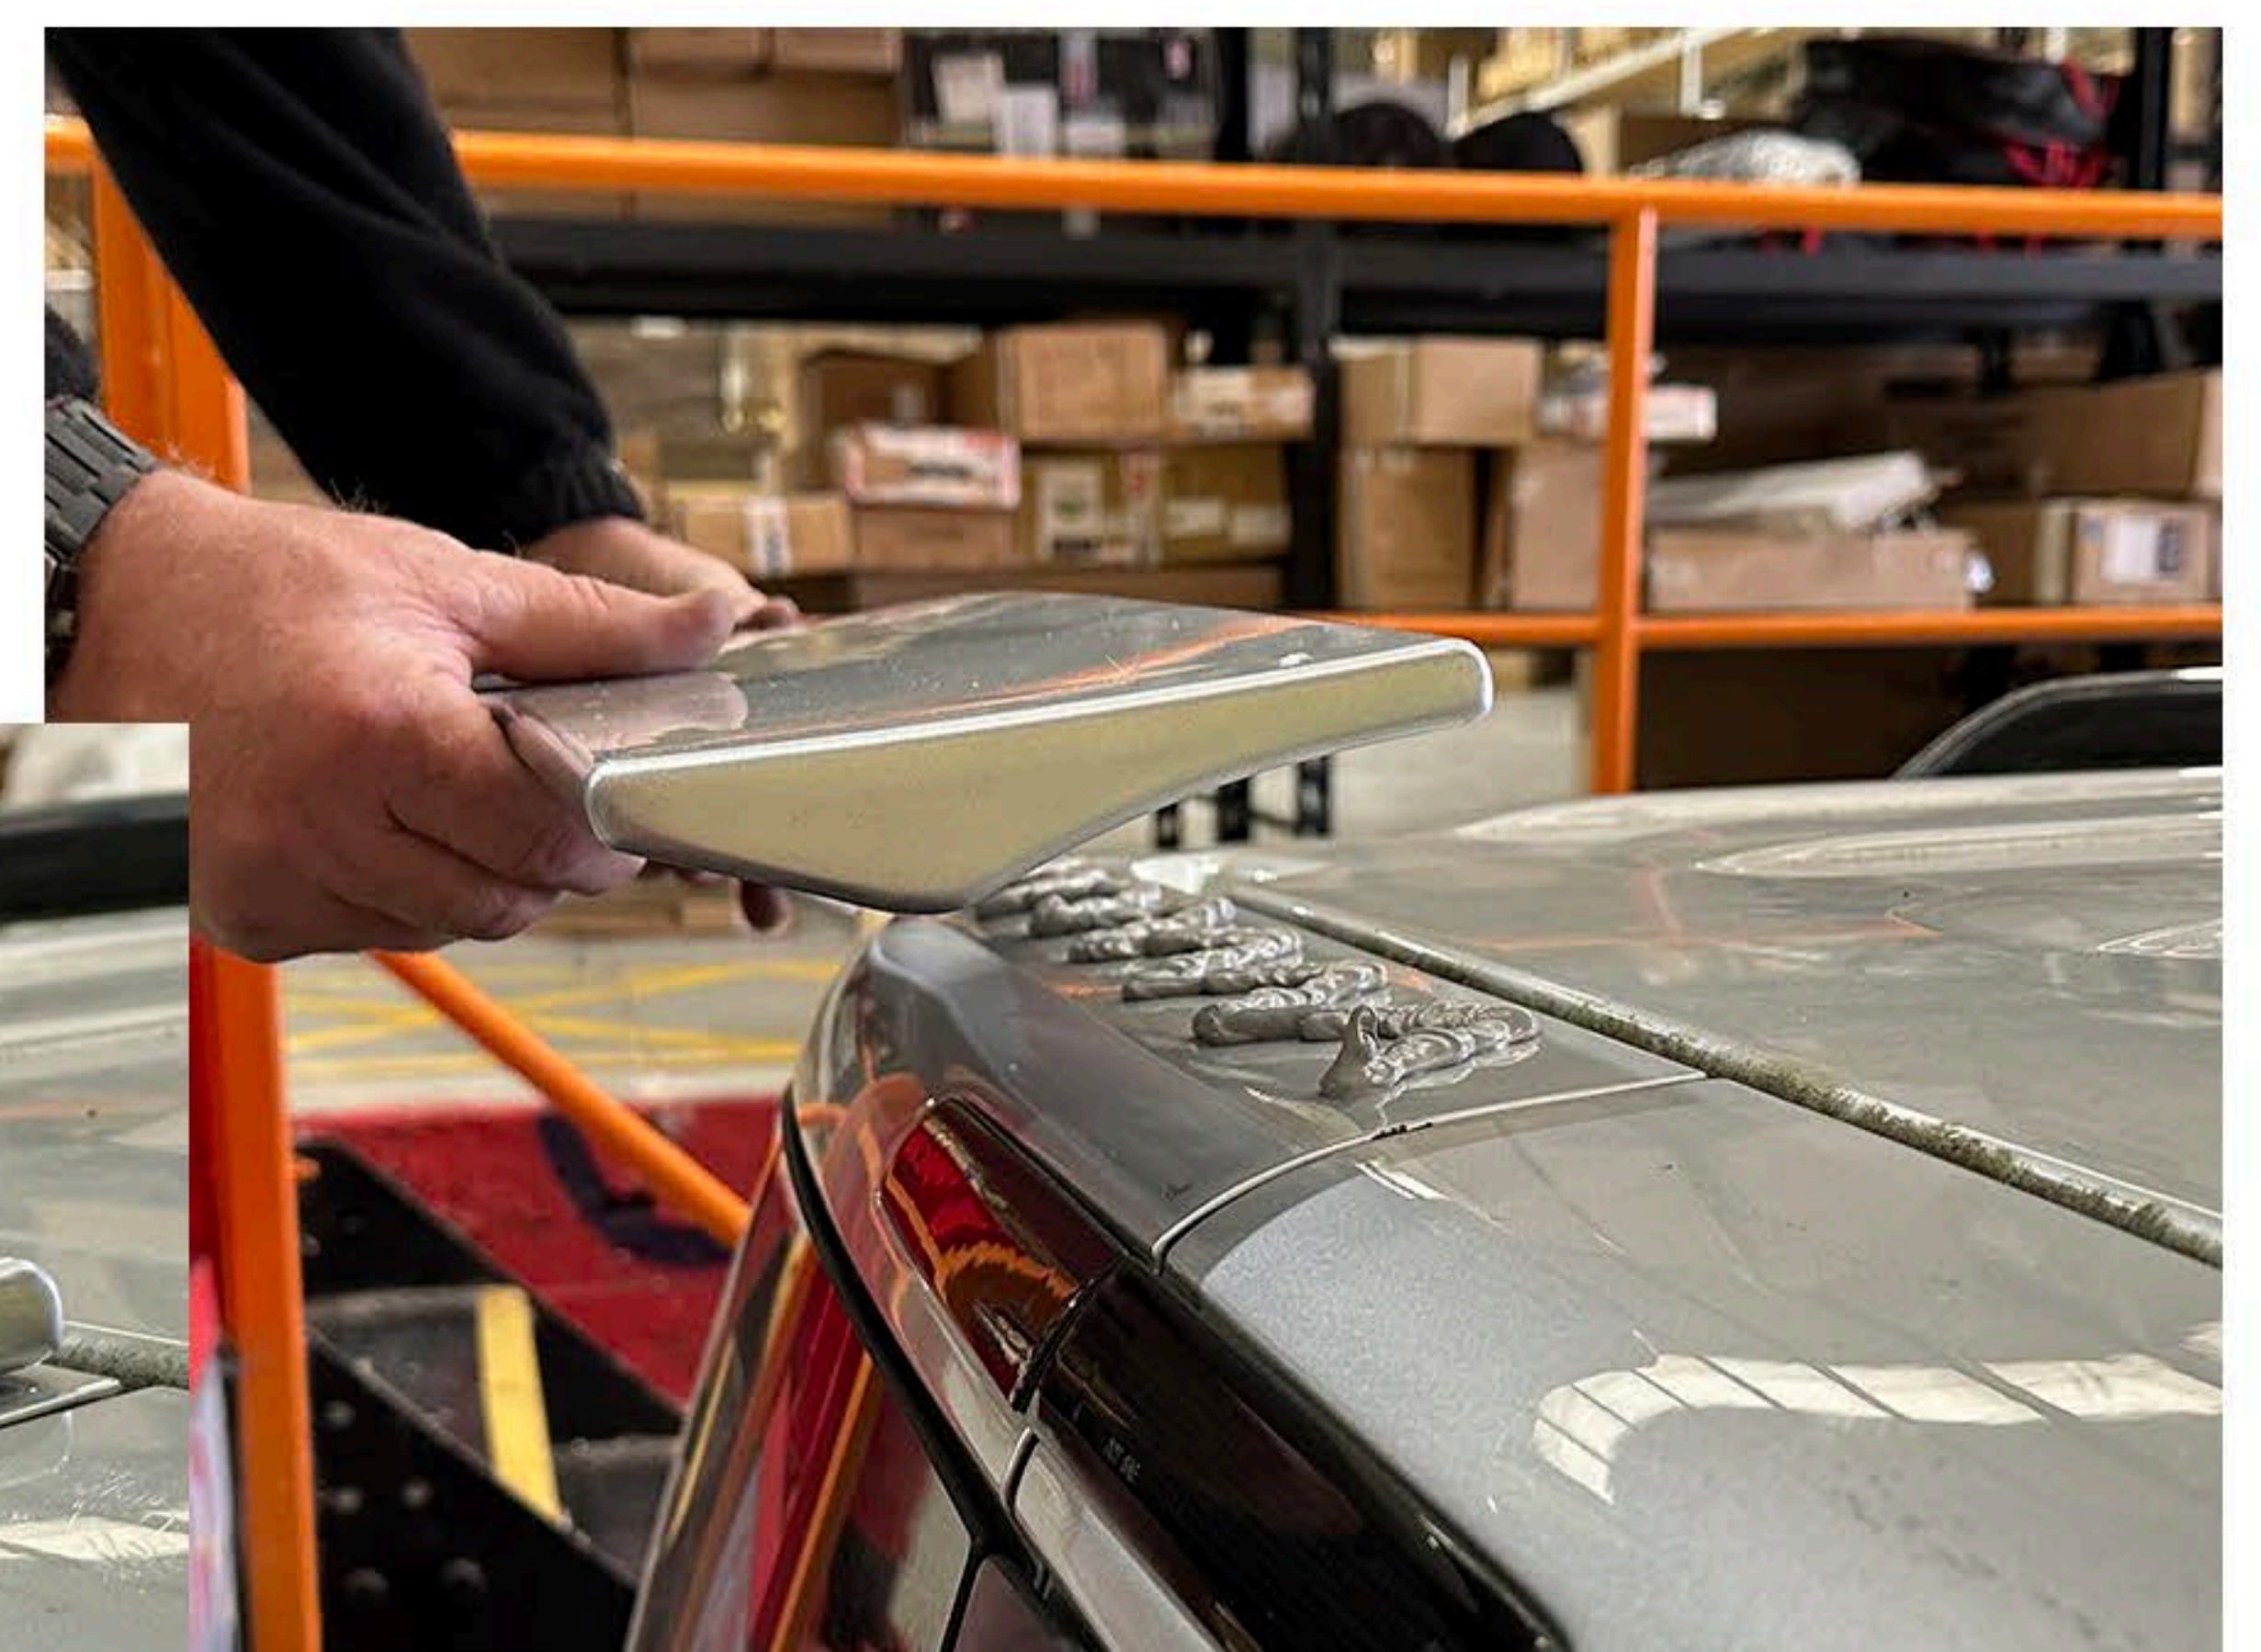

Step 6

Once the spoiler has made contact, secure it by using some tape or masking tape. This will keep the spoiler straight and central on the vehicle.

Apply the tape in the areas shown in step 7.



Step 7



Step 8

Repeat all of the previous steps on the opposite side of your rear spoiler.

We recommend leaving the tape on the spoiler and not driving your Transporter for 24 hours after fitment.





WWW.VEEDUBTRANSPORTERS.CO.UK

Send us pictures of your fitted product on Social Media!

 [veedubtransporters](https://www.instagram.com/veedubtransporters)

 [Vee Dub Transporters](https://www.facebook.com/VeeDubTransporters)

For any further assistance please call our Customer Services Team



0116 409 1911

