



[WWW.VEEDUBTRANSPORTERS.CO.UK](http://WWW.VEEDUBTRANSPORTERS.CO.UK)

# UNIVERSAL CAB DIVIDER KIT

## FITTING INSTRUCTIONS





## Required Tools


- Metal Saw
- Drill with 2.5mm Bit
- Small Screwdriver
- Rubber Mallet
- Measuring Tape

## Time Needed



30 Minutes

## Difficulty

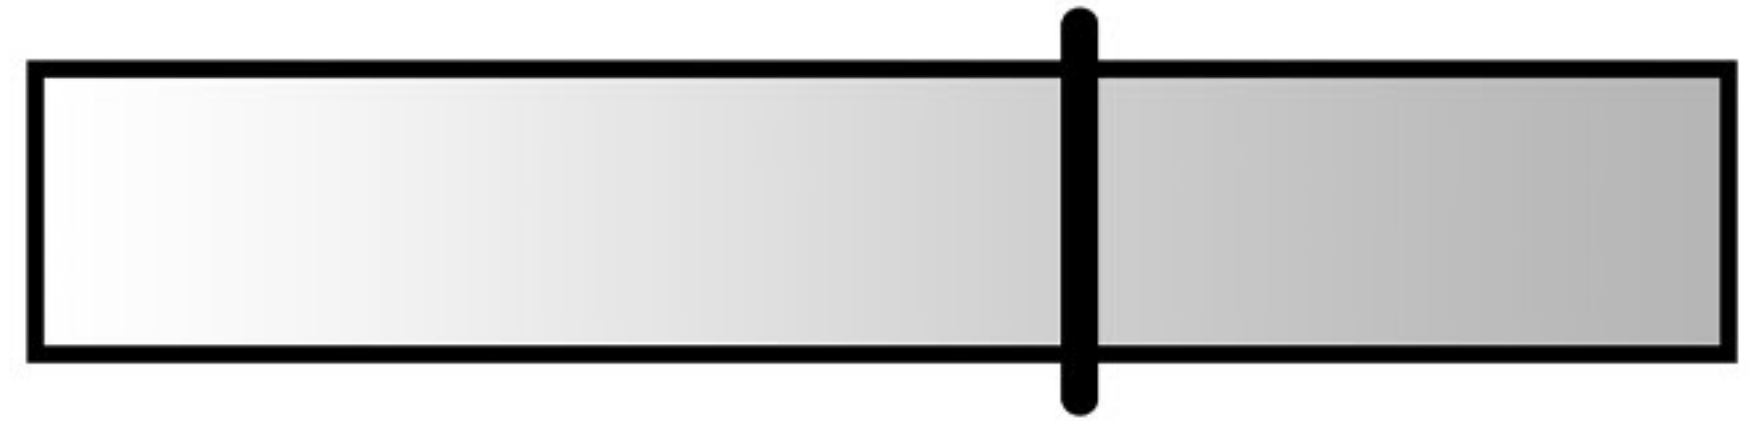

Easy

Hard

## Step 1

Measure the width of the van where you will be placing your rail with a tape measure.



## Step 2

Mark the rail at the appropriate length so you know where to cut it.





## Step 3

Cut the rail using the mark as a guide with an appropriate metal saw. A hack saw is ideal for this step.



## Step 4

Insert an end cap on one end of the rail to stop the curtains sliding out of the rail.



## Step 5

Thread the curtains onto the rail. Keep in mind that the tie-back and poppers will need to end up on the outside edge.

The female and male poppers will also be on the inside edge as these can be used to connect the curtains once they're fitted.







**WWW.VEEDUBTRANSPORTERS.CO.UK**

Send us pictures of your fitted product on social media!

 **veedubtransporters**

 **Veedubtransporters**

For any further assistance please visit this page:

<https://www.veedubtransporters.co.uk/contact-us/>

